



SLSS CANAnalyser Pro Software

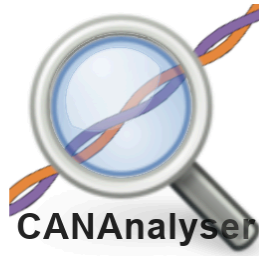

Users Manual

Based on software version 1.2.0.0L

The information contained in this Publication is Proprietary to SeRoSys Technology LLC

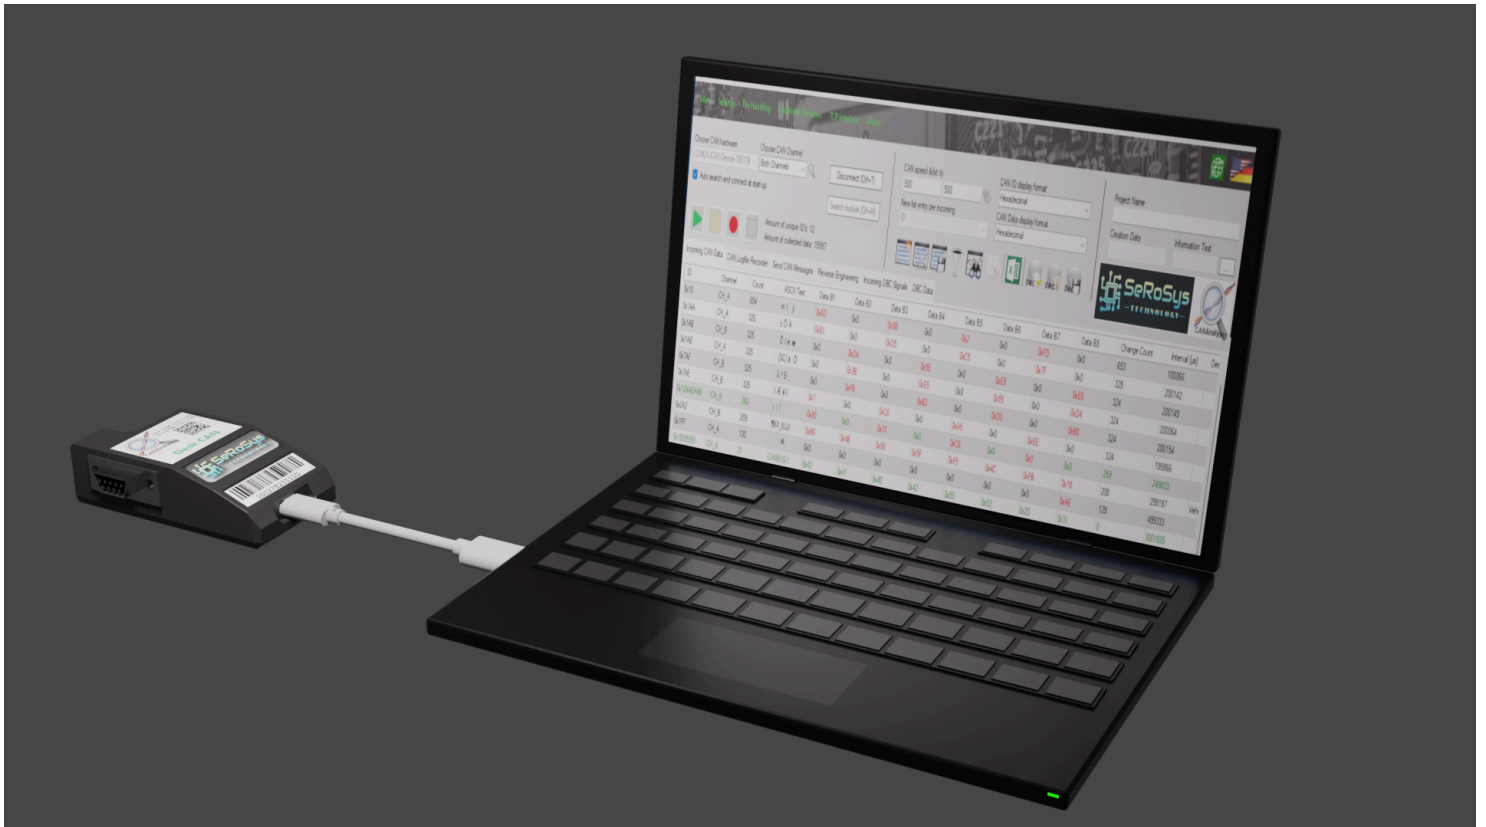

1. Getting started






You must use a USB2.0 compatible cable with the CANAnalyser dongles, not a charge-only USB cable.

1.1. Hardware

For compatibility to the Pro version of SLSS CANAnalyser, please purchase one of our hardware variants. The latest list of variants can be found online here: <https://serosys-tech.com/product-lineup/>

Table 1. Supported Hardware Options

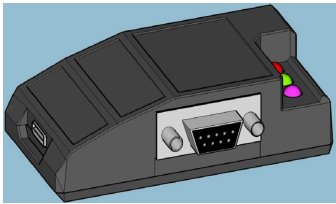
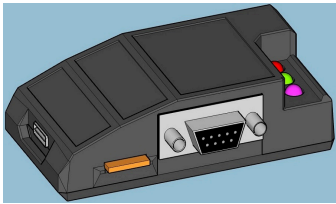
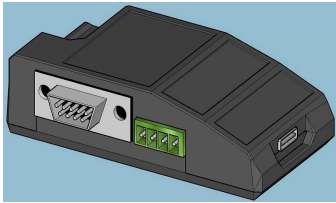
Hardware Model	Basic Feature Information
<div>Desk CAN Pro</div> 	<p>The starting point professional CAN hardware module with more features and power</p> <p>Competitive high speed CAN bus traffic support and full dual CAN bus monitoring plus male and female DB9 ports for CAN traffic pass-through bus tapping, Stand-Alone sending, macro message sending, API interface and much more out of the box!</p>
<div>Storage CAN</div> 	<p>Advanced Features and data storage hardware module with peripheral interface for a customized experience</p> <p>Desk CAN Pro plus a micro-SD reader and the ability to be powered externally via DB9 for standalone datalogging and the ability to playback data to the live bus. In addition, peripheral interface through the qwiic I2C bus interface</p>
<div>Lab CAN</div> 	<p>Tailored for a more integrated hardware programmable lab environment</p> <p>Storage CAN with upgraded support for GPIO interface with 2 inputs and 2 outputs and comes with an industry standard rack mount bracket</p>

1.2. Connector Pinouts

1.2.1. DB9 (D-sub9) Connector

The pinout is the same for both Male and Female connectors. They are internally connected pin to pin and will pass through bus traffic even if unpowered.

Pin #	Function
1	No Connection
2	CAN bus CH-A Low
3	Ground
4	CAN bus CH-B Low
5	No Connection
6	Ground
7	CAN bus CH-A High
8	CAN bus CH-B High
9	12V B+ (only on Lab CAN and Storage CAN. All other variants this is N/C)

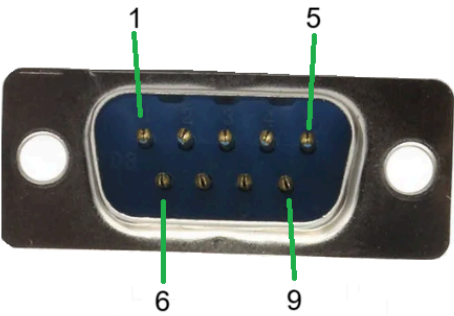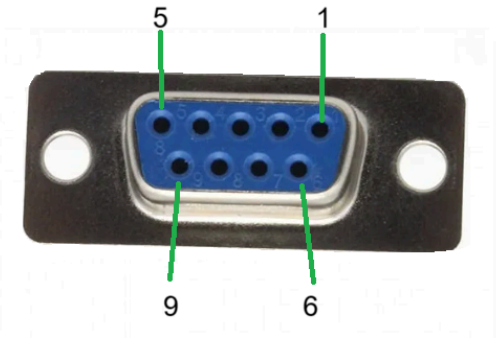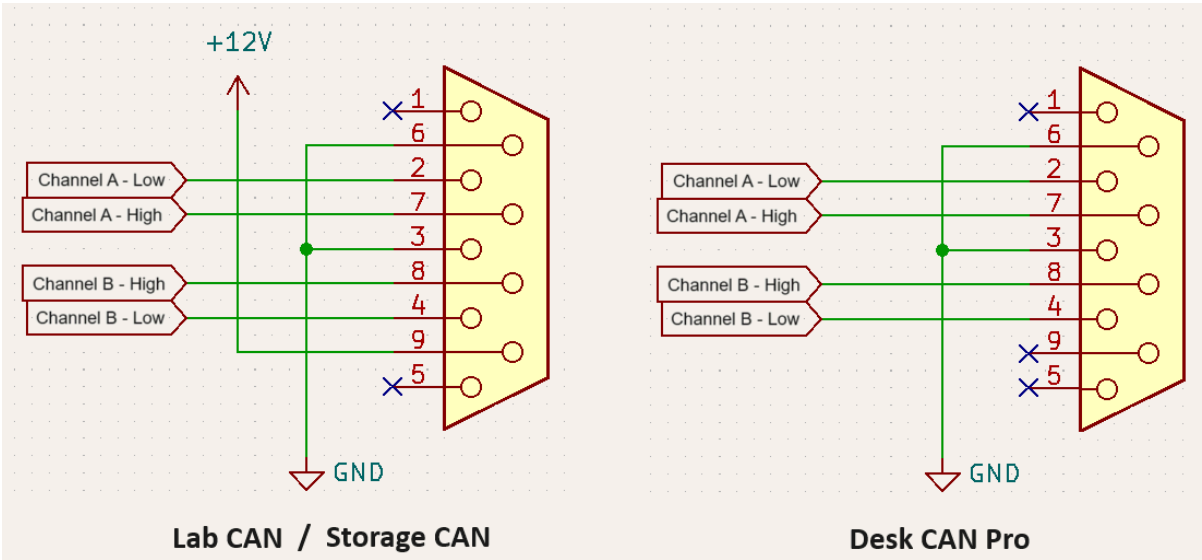

Power

- Only available on Lab CAN and Storage CAN
- Input power voltage supply range: +7 V to +28 VDC (nominal \approx 12 VDC)
- Reverse voltage and transient voltage protection

Ground


- Ground pins are all connected internally

CAN Bus High / Low

- Even though the differential CAN Bus high and low pins do not require a ground reference, it is recommended that ground is carried with these pins for common-mode voltage rejection to avoid potential damage to the transceivers

1.2.2. GPIO Connector

Applicable to Lab CAN only

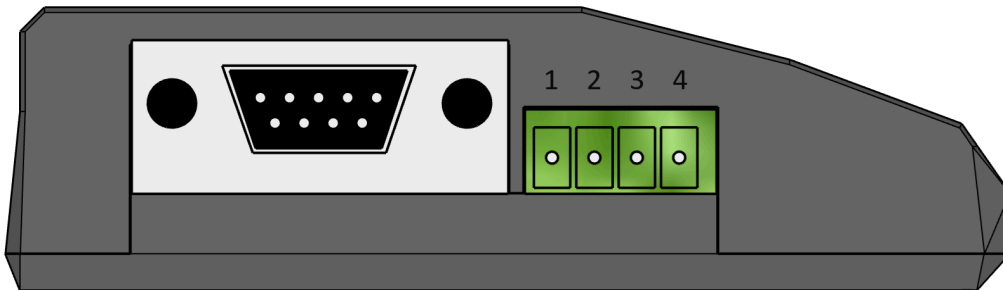

GPIO pins 1 and 2 are inputs

GPIO pins 3 and 4 are outputs



These pins require a ground reference to be connected between the external device and the dongle. The ground reference can be acquired from pins 3 or 6 on either of the DB9 (D-sub9) connectors.

Electrical Parameters

- Automotive grade I/O
- At overtemperature the regulator on the GPIO inputs is automatically turned off by the integrated thermal protection circuit
- 4 GPIO pins supported (2 input, 2 output)
- Output pins for sending CAN signals on GPIO triggers Input pins to trigger a GPIO based on a CAN input received
- Short Circuit Protection on all GPIO pins
- GPIO inputs protected from -43VDC to 45VDC
- GPIO outputs provide up to 100mA steady state at CMOS logic levels (0V / 5V)
- GPIO outputs support input overvoltage protection to 28VDC

Mating Connector

Pluggable System Terminal Block. There are many suppliers of this style of connector. This is one example:

Phoenix Contact	1840382
LCSC Part #	C480547
Package	Pitch=3.5mm

<https://www.phoenixcontact.com/en-us/products/pcb-plug-mc-15-4-st-35-1840382>



MC 1,5/ 4-ST-3,5 - PCB connector

1840382

PCB connector, nominal cross section: 1.5 mm², color: green, nominal current: 8 A, rated voltage (III/2): 160 V, contact surface: Tin, contact connection type: Socket, number of potentials: 4, number of rows: 1, number of positions: 4, number of connections: 4, product range: MC 1,5/..-ST, pitch: 3.5 mm, connection method: Screw connection with tension sleeve, screw head form: L Slotted, conductor/PCB connection direction: 0 °, plug-in system: COMBICON MC 1,5, locking: without, mounting: without, type of packaging: packed in cardboard

1.2.3. USB Connector

Under normal operating conditions while connected to the SLSS CANAnalyser software, the USB power is provided by the USB port of the PC it is connected to.

Under the mode of operation in the StandAlone sending mode, if the dongle is powered by a USB connection that is not connected to a PC, the USB supplied current must be a minimum of 250mA for proper operation of the CAN bus line outputs.

2. SLSS CANAnalyser Software



If desired to use more than 1 dongle on the same PC, please note that multiple instances of the CANAnalyser software may be run at once! So if you want to connect 2 dongles, you can run an additional instance of the software.




To ensure all buttons are accessible and all information is visible, a minimum resolution of 1366 x 768 at 100% scale is required.



Your PC should have a minimum of 8GB of RAM and keep system resources low for optimal performance.

2.1. The Main Screen Layout

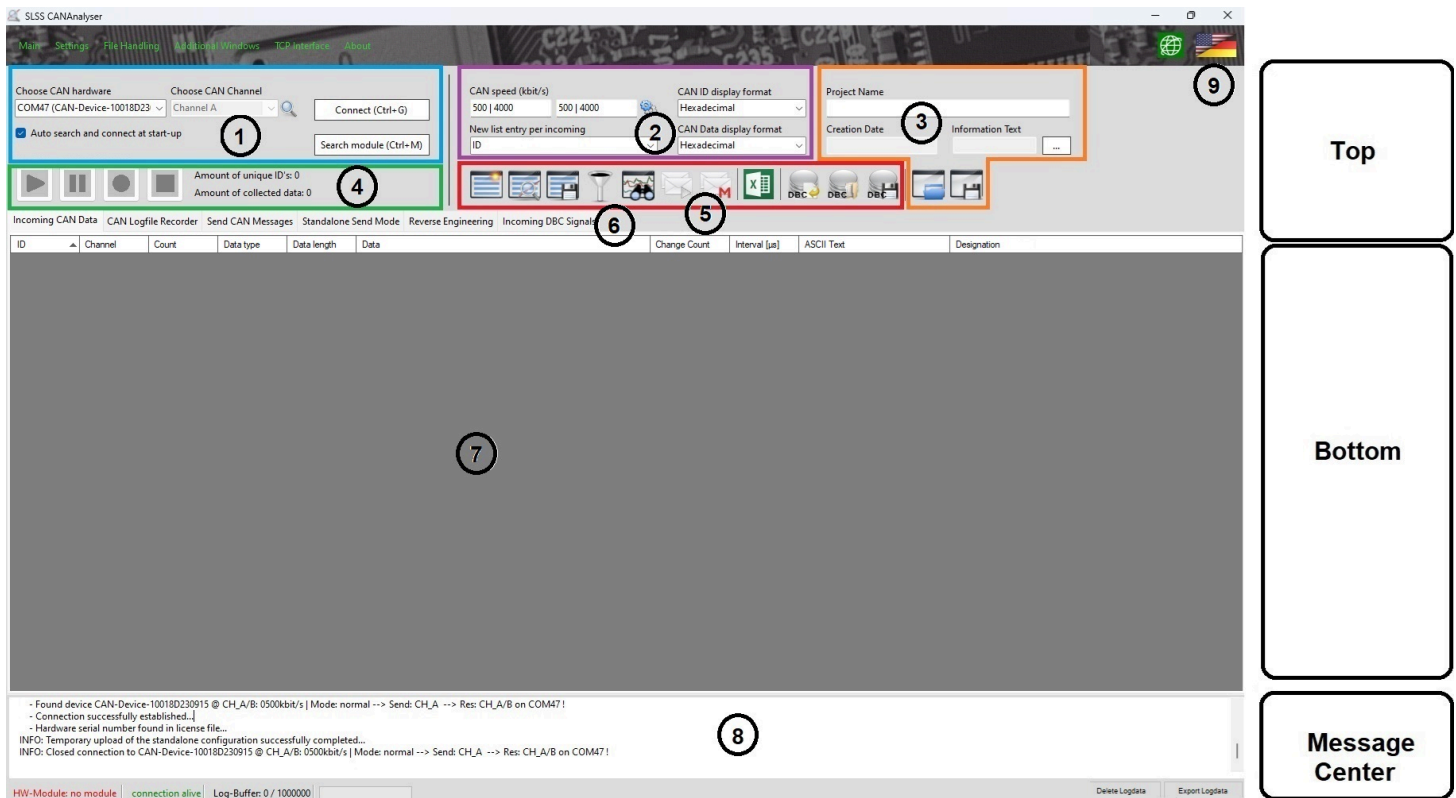

The screen is broken into 3 main vertical regions: Top, Bottom and Message Center.

The Top area contains all the common functions that transpose into the bottom feature tabs and will be context adjusting based on which feature tab is open in the bottom. You will always have all the required controls within reach that are agnostic of which feature tab is open.

The Bottom area shows the CAN traffic or gives you access to the various functions within each feature tab.

The Message Center area shows general log information and other important information.

Here is a description of each of the numbered zones on the main screen:


1. This is the area where all the module hardware physical connection options are made
2. This area controls the CAN connection speed and channel modes and lets you choose the format you want to see and record all data

3. The place to record information about your project that you desire to save notes and give titles and information for future reference. By default, a directory will be created and used under **Documents\SLSS CANAnalyser Projectspace**
4. Allows the user quick button access for recording / playing / pausing CAN data in the Incoming/Logging tabs and shows traffic data highlights
5. These buttons are unique and context specific in most cases to the currently selected feature tab plus fixed buttons for the CAN DBC file input as well as access to the visual graphical analyser and message filters and offers global access to send / stop sending CAN messages from any mode as well as entering Macro sending mode. See section "Contextual Buttons and Features"
6. This is where to select the desired feature tab
7. This is the Bottom area where all relevant information is displayed related to the selected feature tab
8. This is the Message Center area which shows information such as the connection status, hardware module information and connection speed and message buffer usage.
9. The software should install and start in English by default, however if a user desires to change the operating language to German, simply left-click on the flags to alternate between English and German language.



If the connection status (Connection Alive message in the bottom of the screen) is red then your PC has low resources. Please close other applications for improved performance.


2.2. Message Center Details

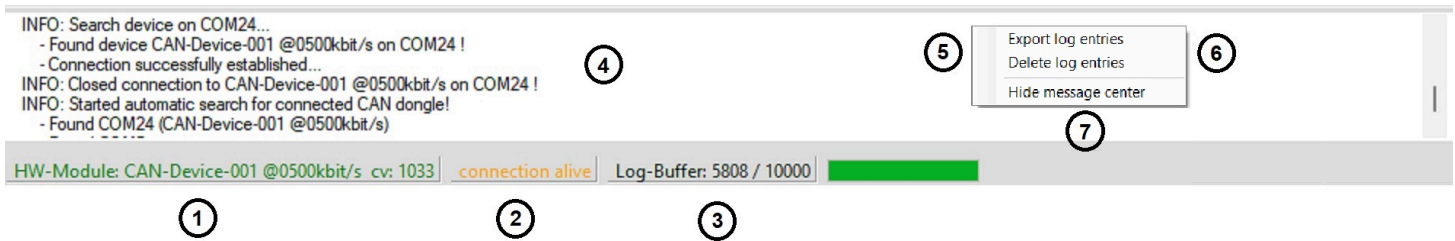


1. Hardware module connection information (once connected properly). Otherwise it states that there is no module connected.
2. Displays connection quality (if connected). (Green color / Yellow color / Red color) If Yellow and Red colors are blinking then consider closing other programs to free up system resources.
3. Shows the current log buffer size used and the maximum size. To increase the log buffer size, see section "Increase Log Buffer Maximum Size"
4. Logged Data from the SLSS CANAnalyser. This may be scrolled through (scroll-bar on the right) to view important chronologically listed SW log data

Right click menu activates these options:

5. Button to clear out the SLSS CANAnalyser log data
6. Button to export the SLSS CANAnalyser log data
7. Hides this entire lower message center (it can be re-enabled from the Settings menu)

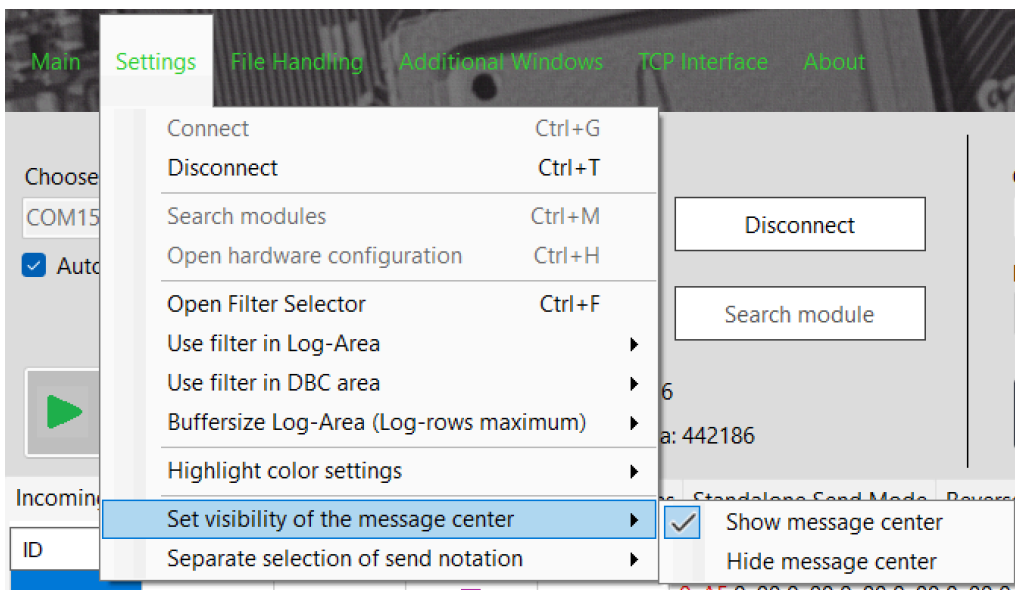

2.3. Understanding the LEDs on the CAN Dongles

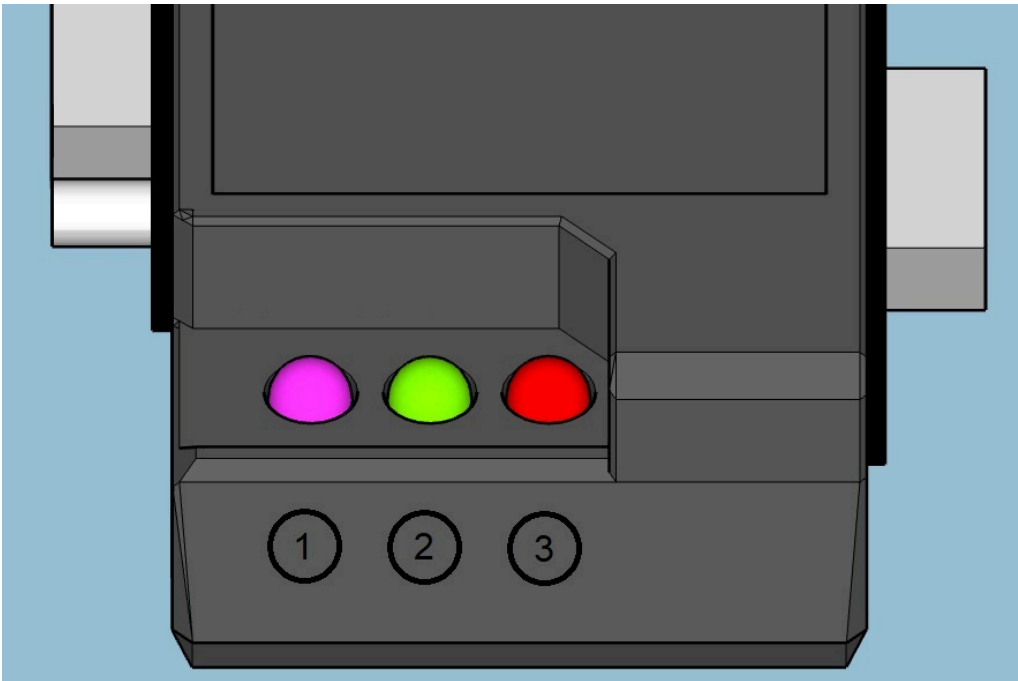

2.3.1. Standard Mode while connected to SLSS CANAnalyser

1. LED 1 - Power and Connection - **Solid Red** - Hardware module is powered up. - **Blinking purple** - Hardware module has an active live connection to the software.
2. LED 2 - CAN bus CH-B - **Green** - Incoming CAN traffic received. - **Red** - Outgoing CAN traffic is being sent. - **Amber** - Incoming and Outgoing traffic
3. LED 3 - CAN bus CH-A - **Green** - Incoming CAN traffic received. - **Red** - Outgoing CAN traffic is being sent. - **Amber** - Incoming and Outgoing traffic

2.3.2. StandAlone Mode while disconnected from SLSS CANAnalyser


1. LED 1 - While a sent message list is stored on the dongle, this LED is always **Blinking purple** - Note that the blinking speed is slower in this mode to indicate it is in Standalone Mode
2. LED 2 - CAN bus CH-B - **Red** - Outgoing CAN traffic is being sent. - **Amber** - Error state indicator for sending CAN messages
3. LED 3 - CAN bus CH-A - **Red** - Outgoing CAN traffic is being sent. - **Amber** - Error state indicator for sending CAN messages

2.4. Establishing the Connection Between Software and CAN Dongle

2.4.1. Connecting to the Dongle Hardware

There are a few ways of connecting the hardware module to the software.

Please make sure you are using a USB 2.0 data cable and that the **Solid Red** color LED is lit up before trying to connect.

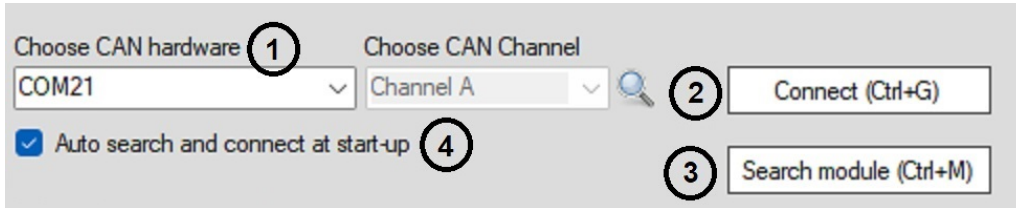

Manually selecting a COM port and then connecting

1. Select the COM port for your hardware dongle in the drop-down box
2. Select the Connect button

This will tell the software to look for the hardware dongle on that port. If it finds the hardware and connects to it, the hardware connection LED will begin blinking purple. If it does not find it, please select a different port and ensure the proper USB driver has been installed.

Automatically searching for your hardware dongle after the program has already been loaded

3. Select the Search Module button and let the software automatically search through the available COM ports to find your hardware dongle. If it finds the hardware and connects to it, the hardware connection LED will begin blinking purple. If it does not find it, ensure the proper USB driver has been installed.



Automatically searching for the dongle may take up to 10 seconds. Direct connect is always faster by selecting the COM port from the drop-down.

Automatically searching for your hardware dongle upon loading the software

4. If desired, the check-box next to "Auto search and connect at start-up" may be selected. Once selected, the next time the software is loaded, it will automatically search for the hardware dongle upon start-up. If it finds the hardware and connects to it, the hardware connection LED will begin blinking purple. If it does not find it, ensure the proper USB driver has been installed.



Automatically searching for the dongle may take up to 10 seconds. Direct connect is always faster by selecting the COM port from the drop-down.

2.4.2. Connection Speed, Connection Mode and List Entry Style

1. CAN speed (kbit/s) 500 | 4000 500 | 4000

2. CAN ID display format Hexadecimal

New list entry per incoming ID

CAN Data display format Hexadecimal



500 kbit/s is the default standard used in most automotive applications so it is our factory default connection speed.

1. Shows the Connection Speed for each channel. The speed and mode can be changed from here
2. Select the option from drop-down menu to view Incoming Messages either by unique ID's or by pure scrolling messages
 - o ID - Only 1 unique ID row is shown in all the data available in the Incoming CAN data tab and just the data changes
 - o Data - Every message with changing data will be shown sequentially in a unique row, even if it is the same ID

2.4.3. Set the Connection Speed and Connection Mode for each Independent Channel

Hardware configuration

CAN Channel	CAN FD active	Arb. bitrate [kbit/s]	FD bitrate multiplier	Bus interaction mode	Send CAN messages	Configurable termination resistor
CH_A	yes	500	x8	normal	enabled	enabled
CH_B	yes	500	x8	normal	enabled	enabled

7. Activate manual CAN FD settings for channel A

Clock Frequency	Sample P. (Arb.)	Bitrate (Arb.)	Prescaler (Arb.)	PSEG1 (Arb.)	PSEG2 (Arb.)	SJW (Arb.)	TDC
80 MHz	80 %	500 kbit/s	1	127	32	32	12
Sample P. (Data)	Bitrate (Data)	Prescaler (Data)	PSEG1 (Data)	PSEG2 (Data)	SJW (Data)		
80 %	4000 kbit/s	1	15	4	4		

8. 9. 10. Get values Check settings

7. Activate manual CAN FD settings for channel B

Clock Frequency	Sample P. (Arb.)	Bitrate (Arb.)	Prescaler (Arb.)	PSEG1 (Arb.)	PSEG2 (Arb.)	SJW (Arb.)	TDC
80 MHz	80 %	500 kbit/s	1	127	32	32	12
Sample P. (Data)	Bitrate (Data)	Prescaler (Data)	PSEG1 (Data)	PSEG2 (Data)	SJW (Data)		
80 %	4000 kbit/s	1	15	4	4		

8. 9. 10. Get values Check settings

Press the image of the gears to open the Hardware Configuration window. The Connection Speed and Connection Mode for each channel can be adjusted here.



Settings menu is only accessible when the dongle is disconnected. Make the desired changes and then reconnect.

1. Select the desired Arbitration bitrate from the drop-down menu. They are able to be independently set for each channel.
2. For standard ISO CAN FD setup, select the FD bitrate multiplier. They are able to be independently set for each channel.



If the manual CAN FD settings are activated below, this box will be greyed out and not used in the speed calculations.

3. Select the desired bus interaction mode from the drop-down menu. It lets you choose between normal mode (*Allows full send and receive interaction on the bus*), Listen Only mode (*Only able to receive bus messages but not able to send*), or Off (*Channel is completely shut off, no receiving or sending possible*).



In Listen Only mode, if the dongle is connected to a bus that has a single node only, the Incoming data will show a very fast message count. This is because it is not an active multi-node bus. Once there are at least 2 nodes on the bus plus the dongle, it will operate normally. Also, the software will allow the Sending tab to appear as if it is sending messages, however they will not be sent to the actual bus



When selecting "Listen-only", the CAN speed will be indicated in red color. When selecting "off", the CAN speed will be indicated in grey color.


Bus interaction mode	Send CAN messages
listen-only	disabled
off	disabled

4. Choose to enable or disable message sending from the drop-down menu. This allows the user to lock out or enable each CAN channel from being able to send messages or not. If these are disabled, the Send CAN Messages Tab will not be functional
5. The drop-down menu allows a SW configurable option for enabling or disabling the 120 ohm bus terminating resistor (independently per channel)
6. CAN FD can be enabled or disabled from the drop-down
7. When selecting the checkbox to activate the manual CAN FD settings, the FD bitrate multiplier box greys out as this overrides it



For CAN FD, settings can be very critical and sensitive. This will help to provide many options from generic settings to very custom settings to customize the connection flexibility.

8. The values of all the critical CAN FD connection parameters may be manually set here. It is recommended to consult with a CAN FD bitrate calculator for best results
9. Selecting the **Get Values** button will open up a window to do the value calculations automatically based on a few user selectable inputs. The user will select the desired clock frequency, sample points (Arb / Data), the desired Arbitration bitrate speed and the FD bitrate multiplier and the values will all be generated. Select **Apply settings** to set them

 Retrieve CAN configuration parameters ✕

Set the required CAN values

Clock Frequency

80 MHz

Sample Points (%)

80

75

Bitrate (Arbitration)

500 kbit/s

FD bitrate multiplier

x8

Prescaler	1 1	Data Bitrate	4000 kbit/s
Sample Point (Arbitration)	80	Sample Point (Data)	75
PSEG1 (Arbitration)	127	PSEG1 (Data)	14
PSEG2 (Arbitration)	32	PSEG2 (Data)	5
SJW (Arbitration)	32	SJW (Data)	5

Apply settings

Cancel

10. Selecting the **Check settings** button will conduct a check of the values that are entered to ensure a valid matching set of calculations will work. This way you can easily check if the chosen settings are valid or not (as shown in these 3 following examples).

Results of the CAN settings check

CAN channel	Channel A	Clock Frequency	40 MHz
Arbitration Sample Point	80 %	Data Sample Point	80 %
Arbitration Btrrate	500 kbit/s	Data Btrrate	2000 kbit/s

Exact Arb. Btrrate Check	PASSED
Exact Data Btrrate Check	PASSED
Data Consistency Check	PASSED


Close

Results of the CAN settings check

CAN channel	Channel A	Clock Frequency	40 MHz
Arbitration Sample Point	80 %	Data Sample Point	84 %
Arbitration Btrrate	500 kbit/s	Data Btrrate	2105 kbit/s

Exact Arb. Btrrate Check	PASSED
Exact Data Btrrate Check	FAILED
Data Consistency Check	PASSED

Close

 Results of the CAN settings check ×


CAN channel	Channel A	Clock Frequency	40 MHz
Arbitration Sample Point	80 %	Data Sample Point	84 %
Arbitration Bitrate	500 kbit/s	Data Bitrate	2105 kbit/s

Exact Arb. Bitrate Check	PASSED
Exact Data Bitrate Check	FAILED
Data Consistency Check	FAILED

Close

2.5. Selecting Your Desired CAN Bus to Monitor

To change between CAN bus monitoring and sending between the CAN channels supported by your hardware.

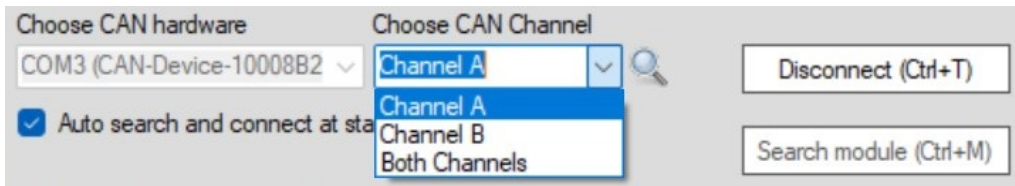


1. Select the drop-down to choose your CAN channel. Once selected, the software will show incoming traffic and send outgoing traffic on the specified channel(s).



If the drop-down menu is greyed out or you cannot select Channel B, the license file does not match the hardware dongle connected to it!

2.6. Controlling Recording / Displaying of CAN Traffic

The buttons allow control over the data recording and display as well as the showing the summary of ID's and amount of data collected

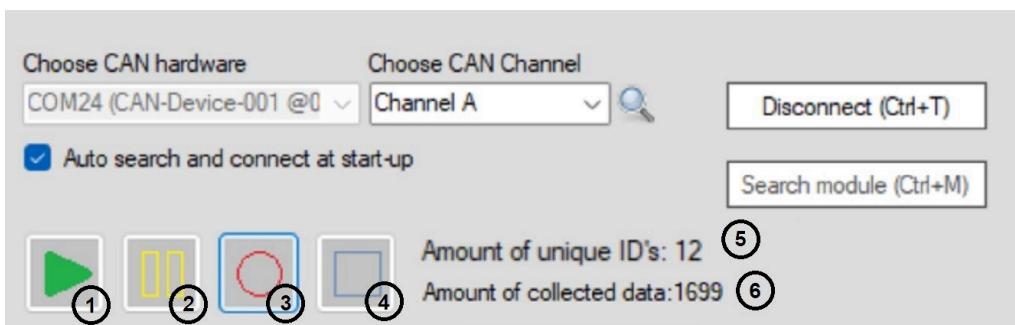

1. The **Play** button is activated by default to show all incoming CAN message data
2. The **Pause** button is used to pause the display and recording of CAN message data
3. The **Record** button is used to record the CAN message data in the buffer
4. The **Stop** button is used to stop the display and recording of CAN message data




If a DBC file is loaded, a context box will ask if the user desires to enhance the log files. This will take some time to post-process and add all of the DBC human readable signal data to the logfile and will be available in the exports. See the section **Incoming DBC Signals Feature Tab** for more details.

5. This displays the number of unique CAN arbitration ID's seen on the incoming data bus (regardless of which channel it is on)
6. This displays the total quantity of messages received (for all channels)

2.7. Selecting the Global Data format to view CAN ID and CAN Data

These 2 drop-down menus allow the user to select their preferred data format used throughout all feature tabs and data exports.

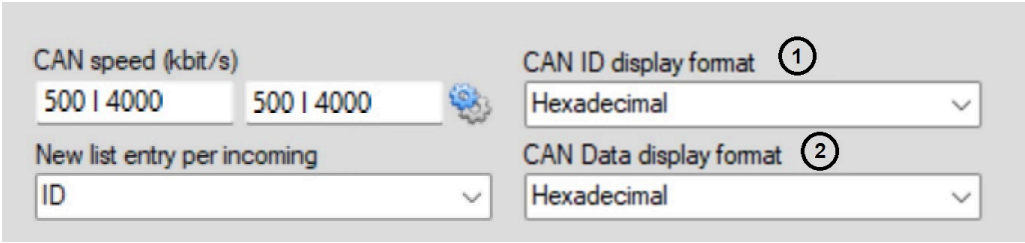

- 1. For Arbitration ID (CAN ID), choose between Hexadecimal, Decimal or Binary format
- 2. For CAN data, choose between Hexadecimal, Decimal or Binary format

2.8. Contextual Buttons and Features

These 9 buttons offer some dynamic functionality. Depending on the selected analysis tab, some buttons dynamically change to fulfill the associated application purpose while others maintain functionality specific to the current analysis tab



Row A. These buttons are available in the following Feature tabs: "Incoming CAN Data" and "CAN Logfile Recorder"

Row B. These buttons are available in the following Feature tabs: "Send CAN Messages", "Standalone Send Mode" and "Reverse Engineering"

Row C. These buttons are available in the following Feature tabs: "Incoming DBC Signals"

Within each row, this is what each button does:

#	Row A	Row B	Row C
1.	Clears the current message list of all data and begins a fresh data view	Clears the current list of messages to be sent	This button is not available
2.	Loads a previously saved list of CAN data and opens it in a separate CAN data viewer window	Loads a list of previously saved data such as CAN messages or reverse engineering data	This button is not available
3.	Saves all currently displayed CAN data	Saves all currently displayed data / configuration	This button is not available
4.	Opens the message filtering setup in a separate window	Opens the message filtering setup in a separate window	This button is not available
5.	Opens the Graphical Analyser Viewer in a separate window	Opens the Graphical Analyser Viewer in a separate window	Opens the Graphical Analyser Viewer in a separate window
6.	Starts or Stops messages in the active Send list from any mode	Starts or Stops messages in the active Send list from any mode	Starts or Stops messages in the active Send list from any mode
7.	Enters Macro sending mode on the bottom of the screen (replacing the message center) This can be toggled on / off at any time	Enters Macro sending mode on the bottom of the screen (replacing the message center) This can be toggled on / off at any time	Enters Macro sending mode on the bottom of the screen (replacing the message center) This can be toggled on / off at any time
8.	Exports all data to a choice of CSV format (multiple CSV files) or Excel format (in multiple worksheet tabs)	Exports all data to a choice of CSV format (multiple CSV files) or Excel format (in multiple worksheet tabs)	Exports all data to a choice of CSV format (multiple CSV files) or Excel format (in multiple worksheet tabs)
9.	Opens a separate window to create and manage DBC message entries	Opens a separate window to create and manage DBC message entries	Opens a separate window to create and manage DBC message entries
10.	Loads in a fully created DBC file and applies it to the current messages	Loads in a fully created DBC file and applies it to the current messages	Loads in a fully created DBC file and applies it to the current messages
11.	Saves the current DBC data into a DBC file	Saves the current DBC data into a DBC file	Saves the current DBC data into a DBC file

2.8.1. Exporting Data



If you have a large amount of buffer data, the export may take a long time. Pressing the export button, if Excel export is chosen, the message center at the lower part of the screen informs the user that the export process has begun. The CANAnalyser software will continue normal operation until the export is completed and then a pop-up message will inform the user when the Export is complete. Avoid pressing the export button again before this process is completed to prevent it restarting the Export request. The CSV export is much faster!

Upon pressing the Export button, there are 2 options presented for Export as Excel or Export as CSV.

Export file type selection

Select the desired export file type

☒ Export as Excel workbook (slower export time)
*All export data saved as various worksheets in a single Excel file

☐ Export as csv files (faster export time)
*csv does not support multiple worksheet tabs so multiple files will be saved for each tab

Used csv file separator

☒ Use specified data filters for export data

Start export

Since CAN data may contain ASCII characters that may conflict with a comma (standard default CSV delimiter), there is an option to choose another delimiting character if desired.

Once the export is completed, this message will be displayed

Amount of unique ID's: 16
Amount of collected data: 19313

Incoming CAN Data | CAN Logfile Recorder | Send CAN Messages | Standalone Send Mode | Reverse Engineering | Incoming DBC Signals

ID	Channel	Count	Data type	Data length	Data	Change Count	Interval [µs]	ASCII Text
0x010	CH_A	721	FD	8	0xA7 0x00 0x25 0x00 0xB5 0x00 0x56 0x00	720	100176	\$ % μ V
0x020	CH_A	721	FD	8	0x00 0xE6 0x96 0x00 0x1E 0x00 0x00 0x00	356	100093	ä ï
0x0FD	CH_A	72	FD	64	0x53 0x65 0x52 0x6F 0x53 0x79 0x73 0x20 0x54 0x65 0x63 0x68 0x6E	0	1002146	SeRoSys Tex Box Signal In
0x123	CH_B	369	FD	8	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00	368	100000	>
0x12AAEAAB	CH_A	288	EXT	8	0x96 0x00 0x11 0x00 0xEE 0x00 0x00 0x00	6	100000	i à
0x1AB	CH_A	361	FD	8	0x00 0x1F 0x00 0x09 0x00 0xD1 0x00 0x00	5	100000	B Ö n
0x1AB	CH_B	369	FD	8	0x00 0x55 0x00 0x56 0x00 0x95 0x00 0x00	5	100000	e É O
0x1FE	CH_A	14495	FD	8	0x55 0x00 0x00 0x00 0x00 0x00 0x00 0x00	14494	100000	
0x1FF	CH_B	147	FD	12	0x00 0x00 0x42 0x00 0x00 0x00 0x00 0x00	2	100000	6 É É
0x2A2	CH_B	245	FD	8	0xCF 0xA4 0x16 0x85 0xEE 0x73 0x02 0xF2	244	300982	Γαίς ó
0x404	CH_B	147	FD BRS	12	0x00 0x00 0x36 0x00 0x00 0x00 0x00 0xC9 0x00 0x00 0x00 0xC9	146	500287	6 É É
0x44A	CH_B	245	FD	24	0xF5 0xA4 0x30 0xCF 0x85 0xF3 0x16 0x0B 0xEF 0xA4 0xEE 0xCF 0x85 0x16 0x0B 0xEF 0xA4 0xEE 0xCF 0x85 0x16 0x0B 0xEF 0xA4 0xEE 0xCF 0x85	244	300926	óπ0í6πσπγπλπκ
0x44B	CH_B	245	EXT FD	16	0xEA 0xA4 0x15 0xCF 0x85 0x0E 0x16 0x21 0xEC 0xA4 0x29 0xCF 0x85 0x16 0x0B 0xEF 0xA4 0xEE 0xCF 0x85	244	300955	άπ0íππσπγπλπκ
0x555	CH_A	72		8	0x4E 0x42 0x55 0x53 0x2D 0x31 0x20 0x43	71	1002414	NBUS-1 C
0x556	CH_B	74		8	0x4E 0x42 0x55 0x53 0x2D 0x32 0x20 0x43	73	1002659	NBUS-2 C
0x7AE	CH_A	361	FD BRS	8	0xB8 0x00 0x8C 0x00 0xD1 0x00 0xCE 0x00	360	200328	. Ñ †
0x7AF	CH_A	361	FD BRS	8	0x00 0x2B 0x00 0x32 0x00 0x2F 0x00 0x39	360	200187	+ 2 / 9

- Found COM40
- Found COM42
- Connection established automatically...
INFO: Load DBC file from: C:\Users\piet\Downloads\Black-box_FDI dbc !
INFO: Starting data export to Excel - You will be informed as soon as the process is completed!

2.8.2. Message Filtering Button

This is a separate window that opens to be able to move to a separate screen or show as a separate window to be able to view the impact of adjusting filter settings on the fly in different feature tabs

The screenshot shows the SLSS CANAnalyser software interface. The main window displays the 'Incoming CAN Data' tab, showing a list of received CAN messages with columns for ID, Channel, Count, Data type, and Data length. A secondary window, titled 'SLSS CANAnalyser CAN filter settings', is open in the foreground. This window contains a 'Set / add filter range' section with 'Start ID' (2) and 'End ID' (3) fields, and a '29bit ID (CAN2.0B)' checkbox. Below this is a 'Show / hide all listed ID's' button (4). The 'Filter options' section includes checkboxes for 'Hide new incoming and unfiltered ID's automatically' (7), 'Include this filter in the Log-Area as well', and 'Include this filter in the DBC area as well'. The main table lists CAN IDs (hexadecimal) (5), their visibility (checkboxes) (6), and their designations (8). The table includes IDs like 0x010, 0x020, 0x0FD, 0x123, 0x12AAEAAB, 0x1AB, 0x1AB, 0x1FE, 0x1FF, 0x2A2, 0x404, 0x44A, 0x44B, 0x555, 0x556, 0x7AE, 0x7AF, 0x123, 0x2A2, 0x44B, 0x44A, 0x556, and 0x556*.

1. This is the Incoming CAN Data Feature tab to see the immediate impact of the filters being applied
2. Enter in a single CAN ID or a range (Start ID to End ID) to use as your filter criteria. Check the box for 29bit ID for filtering Extended IDs
3. After selecting your CAN ID or CAN ID range, select either **Show** or **Hide** to affect the checkboxes in the table below for visibility of the selected IDs
4. This button can be toggled to **Show** or **Hide** ALL visible ID's (checkboxes) in the table below
5. Lists all current received message ID's on the active bus
6. List of checkboxes to show which ID's will be shown or hidden
7. Checkbox options of where to apply the impact of the filter settings
8. If a CAN DBC file is currently loaded, the human readable designations of the ID's will be shown here for reference




It is possible to show both the Standard and Extended ID's in the same filter area. The * indicates an Extended ID

2.8.3. Graphical Analyser Viewer

Often it is easier to visually represent data to make it user friendly for simpler data analysis. This adjustable graphical interface allows analysis of data bytes independently and the user can save the graph image / data for future use.

Multiple windows may be opened to view more than one graph. Right-click on a message in the Incoming CAN Data tab will allow a CAN ID to be directly brought up in the graph as well as clicking the contextual button in the top part of the main screen.

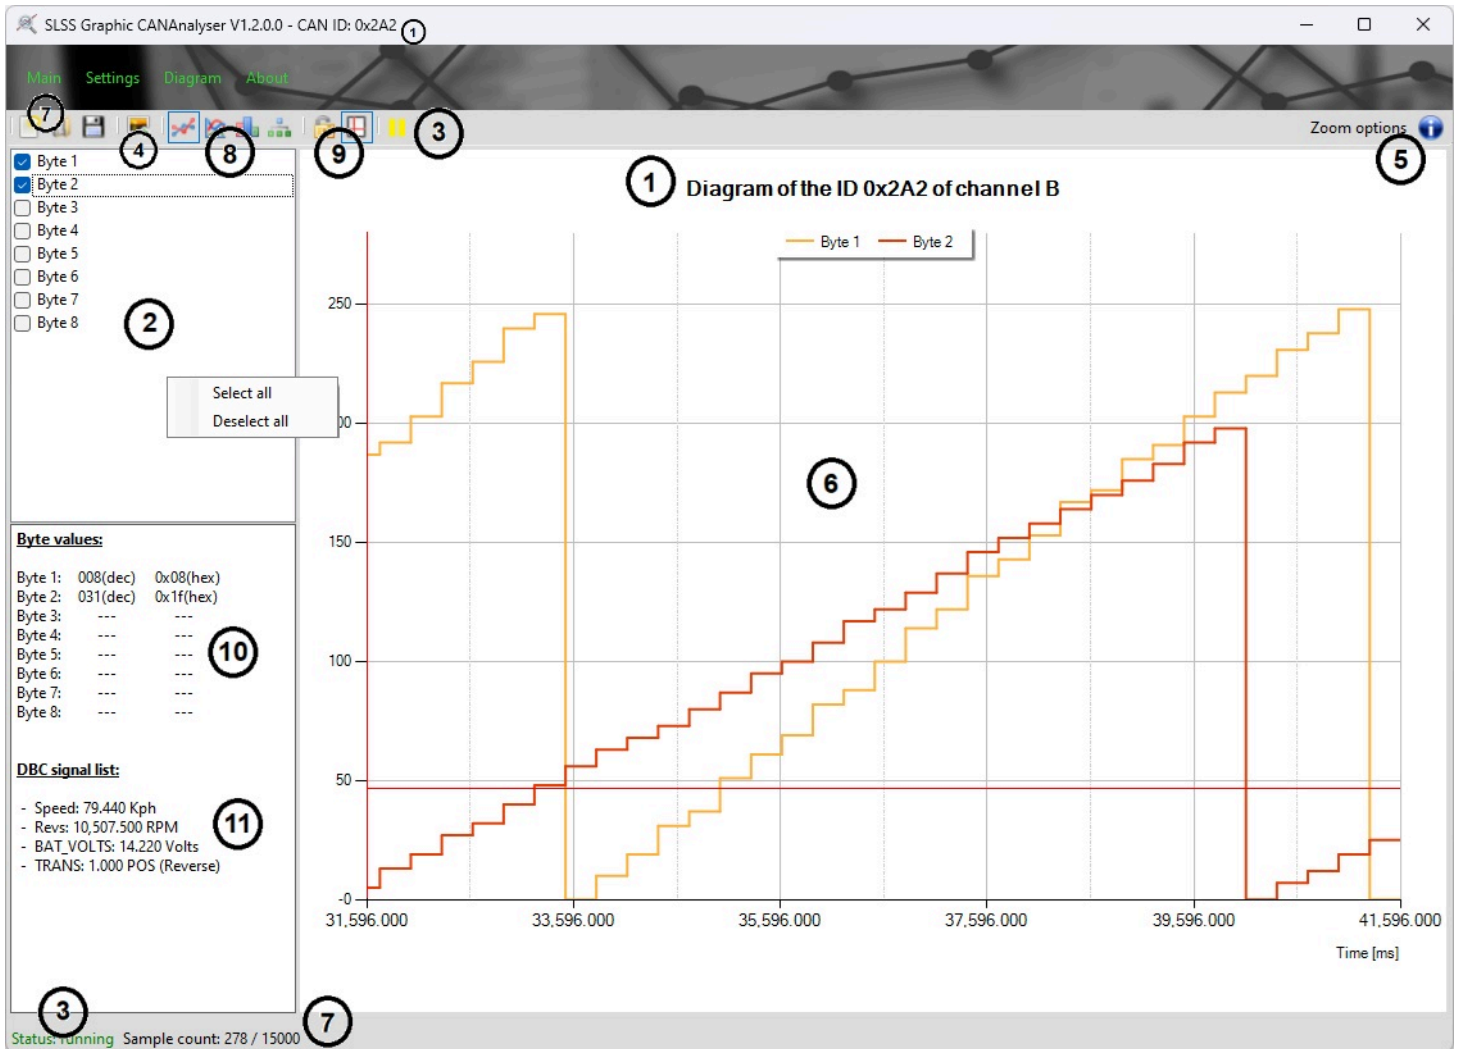


1. This shows the CAN ID identifier and Channel
2. Individual bytes may be enabled / disabled on the graphical viewer as well as buttons to turn them all on / off and reset them. (Right click to bring up the option to select / deselect all messages). Support for all 64 bytes in CAN FD is possible
3. The **Play** and **Pause** button located in top bar of the viewer for easy access to pause the Incoming data whenever necessary and then play it again. Play and Pause status is shown in the bottom left corner
4. Pressing this button will export a screenshot of the graph in .PNG image file format
5. Please see the next sub-section for details for changing and zooming the view options
6. This is the main graphical viewing area. Moving the mouse in this area will also show the X and Y coordinates of the precise position.
7. This shows how many data samples have been collected during the graphical function processing
8. These buttons allow for different graph formats (standard / spline / area / point)


9. These button allow for hiding the cursor or locking its position
10. This area provides the updated matching byte values in DEC and HEX
11. If a DBC file is loaded, this area shows the human readable translation of the data in real time

2.8.4. Adjusting the View and Zoom of the graphical analyser

Hovering the mouse cursor over the blue i button in the top right corner will show this zoom option box. Those are the shortcuts for adjusting the desired zoom area.

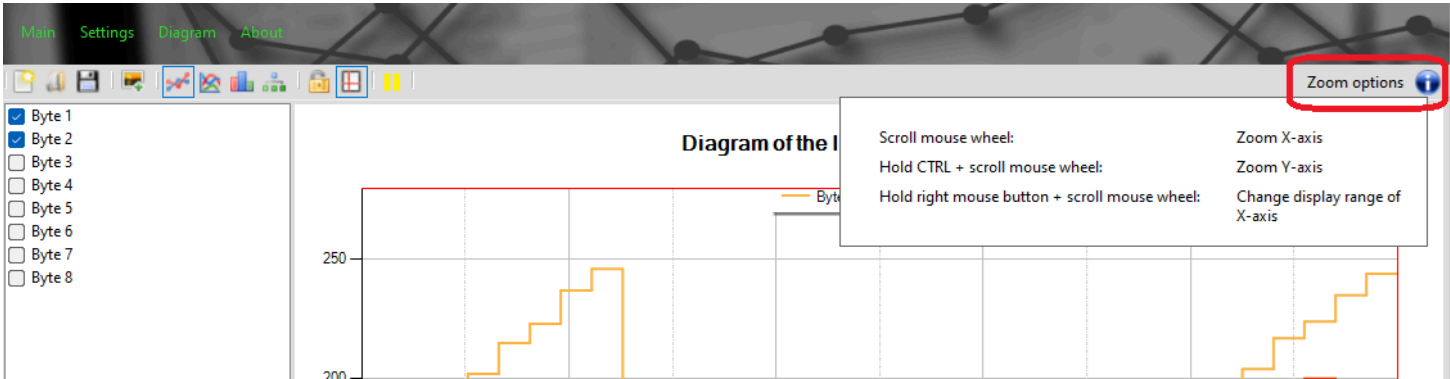


By right-clicking anywhere in the graphing area, another zoom shortcut menu is seen for keyboard shortcuts to manipulate different zoom functions.

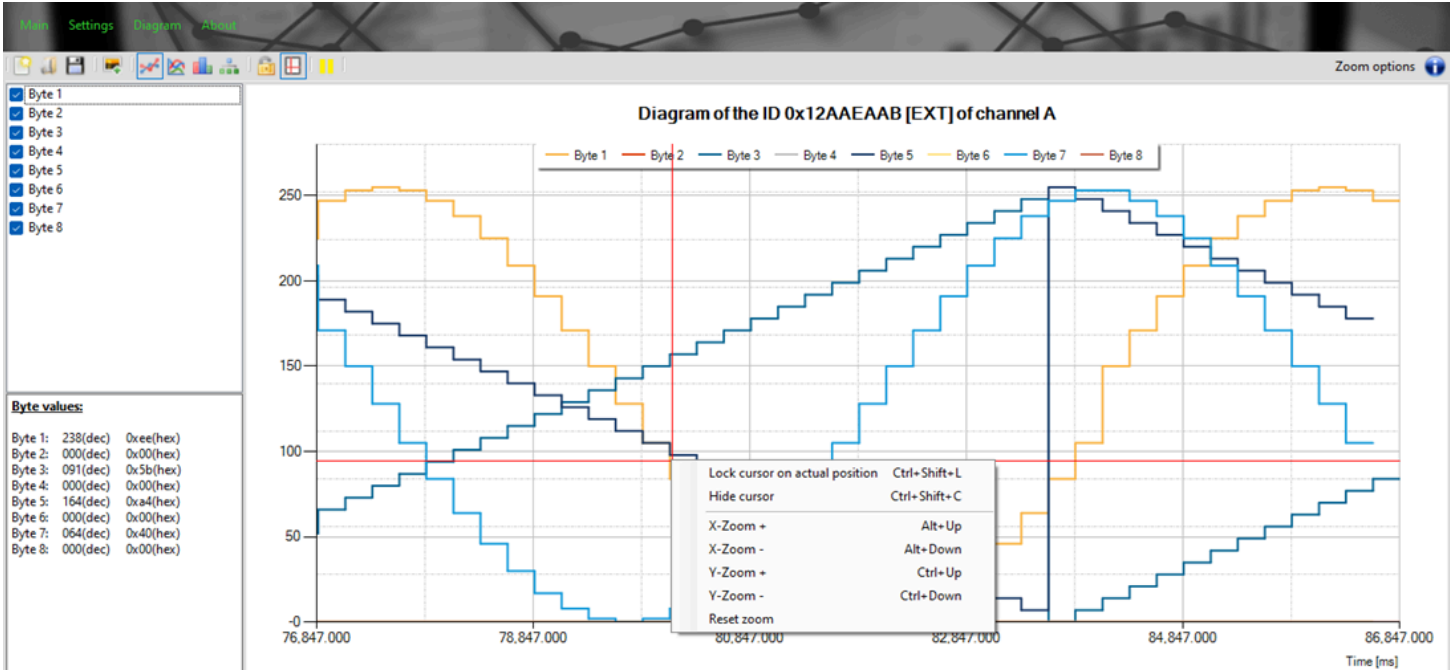

Anytime the graph view needs to be be reset, select "Reset zoom"

2.9. Increase Log Buffer Maximum Size

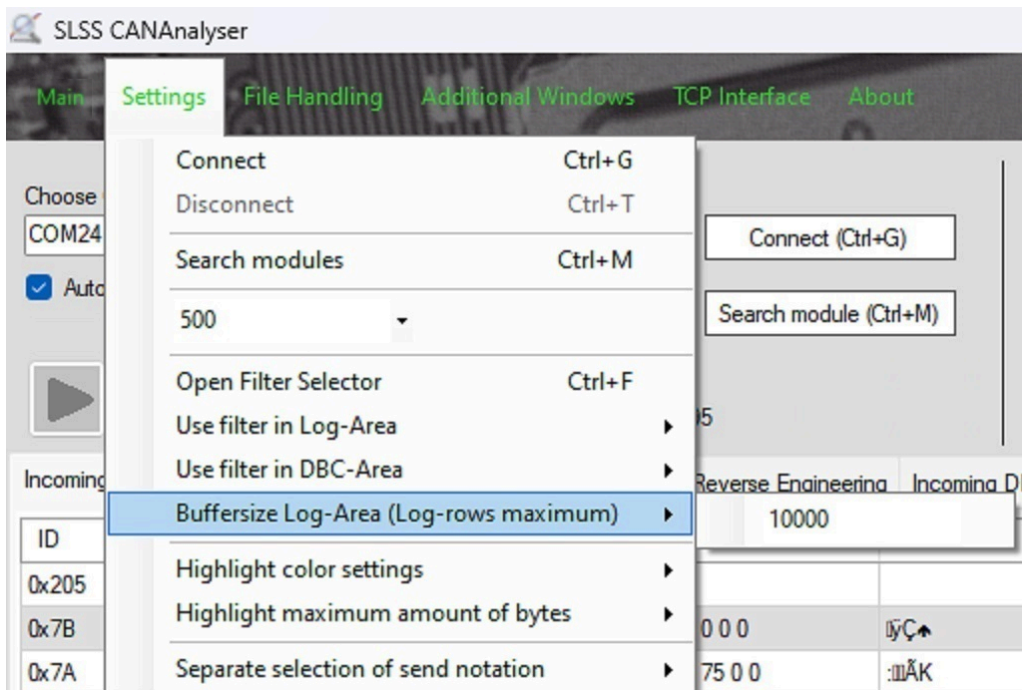

Going into this menu allows you to increase the maximum recording log buffer size. Note that the larger the log buffer, the longer it takes to save the exported data. A value entered higher than the allowed maximum will default to the maximum value.

3. Feature Tabs

3.1. Incoming CAN Data Feature Tab

This is the default tab and the most important tab that gives an overview of all current incoming CAN data.

Each column may be shrunk or widened to suit individual preferences.

Clicking on the header of each column will also sort the table order based on the column (low to high or high to low)

Incoming CAN Data										CAN Logfile Recorder										Send CAN Messages										Standalone Send Mode										Reverse Engineering										Incoming DBC Signals									
ID	Channel	Count	Data type	Data length	Data	Change Count	Interval [µs]	ASCII Text	Designation																																																		
0x010	CH_A	14979	FD	8	0xB8 0x00 0xEF 0x00 0x06 0x00 0x89 0x00	14978	100212	. i 0 0																																																			
0x020	CH_A	14979	FD	8	0x00 0x78 0x50 0x00 0x0A 0x00 0x00 0x00	7348	100323	xP [LF]																																																			
0x0FD	CH_A	1497	FD	64	0x53 0x65 0x52 0x6F 0x53 0x79 0x73 0x20 0x54 0x65 0x63 0x68 0x6E 0x6F 0x6C 0x6F 0x67 0x79 0x20 0x43 0x41 0x4E 0x20 0x46 0x44 0x20 0x42 0x6C 0x61 0x63 0x68 0x20 0x42 0x6F 0x78 0x20 0x53 0x69 0x67 0x6E 0x61 0x6C 0x20 0x49 0x6E 0x6A 0x65 0x63 0x74 0x6F 0x72 0x20 0x2D 0x20 0x53 0x65 0x70 0x74 0x20 0x32 0x30 0x32 0x34 0x20	0	1001989	SeRoSys Technology CAN FD Black Box Signal Injector - Sept 2024																																																			
0x100	CH_A	1039		3	0x00 0x00 0x00	616	152247																																																				
0x100	CH_B	1039		3	0x00 0x00 0x00	616	152248																																																				
0x123	CH_B	7490	FD	8	0x3E 0x00 0x00 0x00 0x00 0x00 0x00 0x00	7489	200407	>																																																			
0x12AAEAAB	CH_A	5992	EXT	8	0xEE 0x00 0x23 0x00 0xDC 0x00 0xBF 0x00	5991	251036	i # 0 0																																																			
0x1AB	CH_B	7490	FD	8	0x00 0x70 0x00 0x7F 0x00 0x03 0x00 0xB3	7489	200404	p 0 3																																																			
0x1AB	CH_A	7490	FD	8	0x00 0x67 0x00 0x98 0x00 0x03 0x00 0x1F	7489	200411	g 0 0																																																			
0x1FE	CH_A	299628	FD	8	0xCD 0x00 0x00 0x00 0x00 0x00 0x00 0x00	299627	5010	á																																																			
0x1FF	CH_B	2996	FD	12	0x00 0x00 0xD8 0x00 0x00 0x00 0x00 0x27 0x00 0x00 0x00 0x27	2995	501068	Ø ' '																																																			
0x2A2	CH_B	4993	FD	8	0x1A 0xB7 0x70 0x46 0xF6 0x1F 0x85 0x44	4992	300425	"¿(Kq0a	Vehicle_Messages • Speed: 489.300 Kph • Revs: 4.830.750 RPM • BAT_VOLT: 14.400 Volts • TRANS: Neutral POS																																																		
0x404	CH_B	2996	FD BRS	12	0x00 0x00 0xED 0x00 0x00 0x00 0x00 0x12 0x00 0x00 0x00 0x12	2995	501084	Ø ' '																																																			
0x44A	CH_B	4993	FD	24	0xF9 0xB7 0x45 0x1A 0x46 0x70 0x70 0x90 0xE9 0xB7 0x48 0x1A 0x46 0x6F 0x70 0x60 0xE9 0xB7 0x13 0x1A 0x46 0x67 0x70 0xC6	4992	300411	ê¿"K♣(ë÷¿"KŦ(çô¿)"KøŦ	CANFD_DBC_Signals																																																		

- ID** - Displays the Arbitration ID of each unique CAN message received or sent
- Channel** - Displays the source of the CAN data for each row:

Channel	Data Source
CH_A	Data received from the bus into the hardware module on CAN bus CH-A
CH_B	Data received from the bus into the hardware module on CAN bus CH-B
SEND_A	Data sent from the hardware module on to CAN bus CH-A
SEND_B	Data sent from the hardware module on to CAN bus CH-B



SEND_A and SEND_B entries will only be shown if the hardware dongle receives an acknowledgement on an active bus. Therefore if the dongle is not connected to a bus where the send function receives verification that the message was sent, these entries will not be shown on this view.

- Count** - The count of how many times the CAN ID was sent or received, regardless if there was any change in Byte data
- Data type** - This is the type of data for this row. **If this field is blank then the message is a CAN 2.0 format**
[EXT] = CAN 2.0 Extended ID
[EXT] [FD] = CAN FD Extended ID
[FD] = CAN FD
[FD] [BRS] = CAN FD Bit Rate Switch
- Data Length** - The number of bytes for the CAN ID


6. **Data** - Displays the data bytes (up to 64 for CAN FD) for the CAN ID. *(Note the red colored entries. This is the changing byte highlighting. This will be described in more detail in the next sub-section)*
7. **Change Count** - The count of how many times the data changed for the CAN ID
8. **Interval (µs)** - The time delta in microseconds between each time this message is received
9. **ASCII Text** - Displays the concatenated ASCII converted data of the data bytes for the CAN ID.
 Note that to display certain ASCII special items, this is the nomenclature to represent these special characters:
 [CR] = carriage return
 [LF] = line feed
 [SC] = semicolon
10. **Designation** - Human readable message name of the CAN ID. *This only populates if a valid CAN DBC has been loaded*
11. If a valid CAN DBC is loaded and the Designation is shown, clicking on the CAN ID will expand that Designation box to show the human readable CAN signals for that row. If there multiple IDs with data in the Designation column, only the Designation name will be shown unless selecting the row to expand to view the signals for that Designation. Note only one row shows at a time. (see image here)

Incoming CAN Data										
CAN Logfile Recorder		Send CAN Messages		Standalone Send Mode		Reverse Engineering		Incoming DBC Signals		
ID	Channel	Count	Data type	Data length	Data	Change Count	Interval [µs]	ASCII Text	Designation	
0x100	CH_A	1039		3	0x00 0x00 0x00	616	152247			
0x100	CH_B	1039		3	0x00 0x00 0x00	616	152248			
0x123	CH_B	15846	FD	8	0x00 0x00 0x00 0x3E 0x00 0x00 0x00 0x00	15845	200426	>		
0x12AAEAAB	CH_A	12675	EXT	8	0xE1 0x00 0x42 0x00 0xBD 0x00 0xD1 0x00	12674	250232	ä B ½ Ñ		
0x1AB	CH_B	15846	FD	8	0x00 0xEB 0x00 0x76 0x00 0x50 0x00 0x4F	15845	200433	L Ä U j		
0x1AB	CH_A	15847	FD	8	0x00 0xDE 0x00 0x9E 0x00 0xE9 0x00 0x28	15846	200433	ü + *		
0x1FE	CH_A	633876	FD	8	0x3C 0x00 0x00 0x00 0x00 0x00 0x00 0x00	633875	5010	s		
0x1FF	CH_B	6338	FD	12	0x00 0x00 0x14 0x00 0x00 0x00 0xEB 0x00 0x00 0xEB	6337	501090	ÿ ÿ		
0x2A2	CH_B	10563	FD	8	0xF8 0x9A 0x6D 0x87 0xF0 0x7C 0xAF 0x92	10562	300438	am&™	Vehicle_Messages * Speed: 396.720 Kph * Rps: 8.667.250 RPM * BAT_VOLTS: 14.400 Volts * TRANS: Neutral POS	
0x404	CH_B	6337	FD (RS)	12	0x00 0x00 0x14 0x00 0x00 0x00 0xEB 0x00 0x00 0xEB	6336	499908	ü ä ë		
0x44A	CH_B	10563	FD	24	0xEA 0x9A 0x72 0xF8 0x87 0xC2 0x6D 0xCD 0xED 0x9A 0x08 0xF8 0x87 0x94 0x6D 0x55 0xED 0x9A 0xC7 0xF8 0x87 0xE3 0x6D 0x29	10562	300423	ëraÄmliiäemU(iÇoām)	CANFD_DBC_Signals	
0x44B	CH_B	10563	EXT FD	16	0xF9 0x9A 0x67 0xF8 0x87 0x4F 0x6D 0x91 0xEF 0x9A 0x46 0xF8 0x87 0x53 0x6D 0x2B	10562	300412	ügeOmi FeSm+	CANFD_Ext_DBC_Signals	



Maximum number of signals that may be viewed is 27 due to row height limit in the Incoming data tab. To view the full set of signals, use the "Incoming DBC Signals" tab or export and view in the datalogger to view output offline

Settings Menu Options

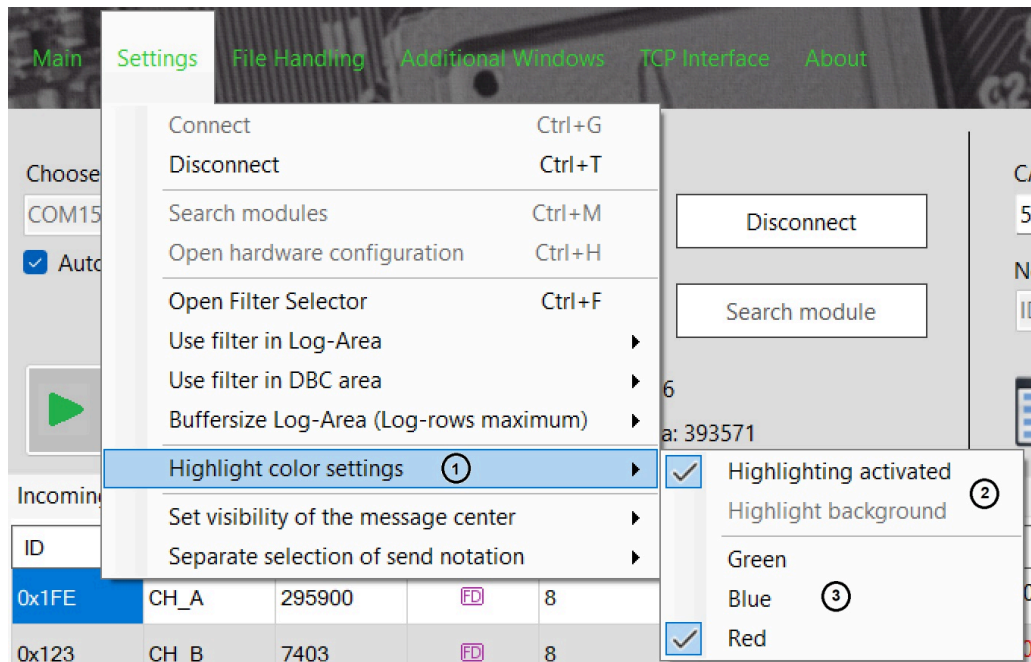

- 1. Enter this sub-menu to access the options of the byte highlighting behavior
- 2. Activate byte highlighting or disable it (It is on by default) or change modes to highlight the background or not
- 3. Select the color you prefer. Red is the default

Byte Highlighting

This feature allows a visual aid to more easily detect the changing of data bytes. There are 2 styles used in this software.

Color changing of the data

Data
0x95 0x00 0x1E 0x00 0xB9 0x00 0x64 0x00
0x00 0x78 0x3C 0x00 0x0A 0x00 0x00 0x00
0x84 0x00 0xD5 0x00 0x14 0x00 0x5C 0x00
0x00 0x37 0x00 0x25 0x00 0xA8 0x00 0xA0
0x96 0x00 0xCE 0x00 0x31 0x00 0xFD 0x00
0x4E 0x42 0x55 0x53 0x2D 0x31 0x20 0x43

Color changing of the data cell

Data
0x5F 0x00 0x00 0x00 0x00 0x00 0x00 0x00
0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00
0x1F 0x00 0x9C 0x00 0x0B 0x00 0x0E 0x00
0x00 0x9E 0x00 0x1F 0x00 0xE3 0x00 0xA8
0x00 0xFA 0x64 0x00 0x0A 0x00 0x00 0x00
0x00 0xBF 0x00 0x22 0x00 0x06 0x00 0x36

These methods are mutually exclusive and selectable in the setting menu. To change between these modes, you must disconnect first and then change the selection in the settings menu and then reconnect. See next section for details on the setting menu to alternate these or disable the feature.

Right-Click Menu

Using the mouse Right-click function on most of the tabs provides a menu of quick access tasks to access that are convenient from this location. It is good to left-click and select a cell in a row first to ensure the right-click context menu reacts to the data in the selected row.

Incoming CAN Data		CAN Logfile Recorder	Send CAN Message
ID	Channel	Count	Data type
0x1FE	CH_A	44907	FD
0x010	CH_A	2246	FD
0x020	CH_A	2246	FD
0x1AB			FD
0x7AE			FD BRS
0x7AF			FD BRS
0x12AAB			EXT
0x555			

Open Filter Selector Ctrl+F

Open SLSS CANData Viewer

Save project Ctrl+S

Export data to Excel file

Save actual table Ctrl+Alt+S

Clear actual table Ctrl+N

Add message to send area


Open in Graphic CAN Analyser

Each of these menu items are shortcuts to the same feature / function offered in other parts of this manual so these are just brief descriptions for each one:

- Opens the message filtering setup in a separate window
- Loads the external CANData Viewer window
- Saves the current project parameters
- Opens the dialog box for choosing your export options and then exports data
- Saves current data from the Incoming CAN Data tab (snapshot of the current messages - 1 per ID)
- Clears the current Incoming data and is ready to be populated again
- Directly adds the current selected ID and data bytes of the selected row into the Send CAN Messages
- Directly opens the current selected ID in the external Graphical Analyser window

3.2. CAN Logfile Recorder Feature Tab

This feature tab is used to display and store a running log of all data received sequentially. This data may be saved or exported for further analysis.

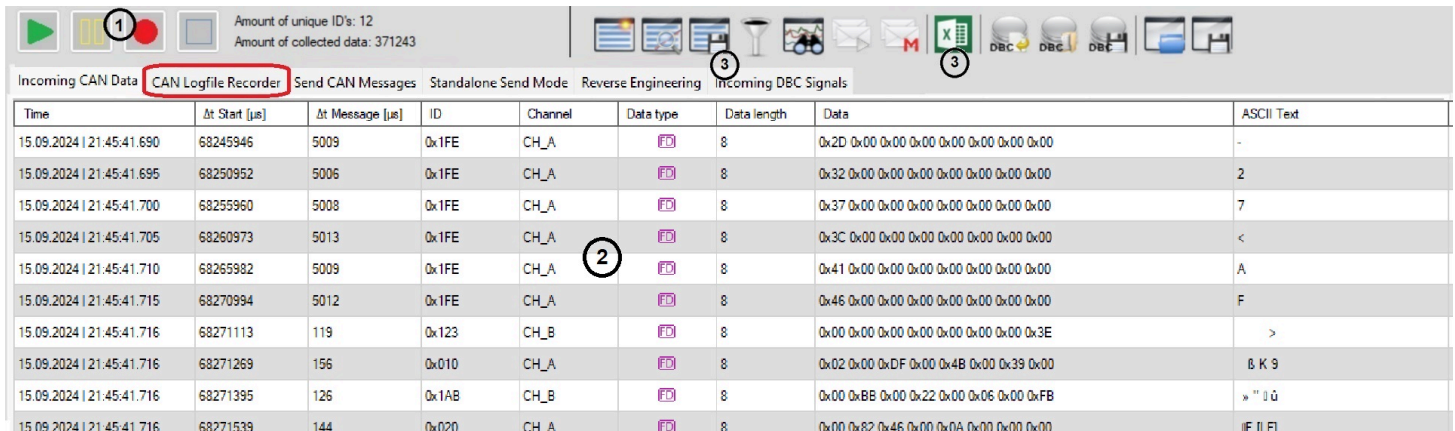


Time	Δt Start [μs]	Δt Message [μs]	ID	Channel	Data type	Data length	Data	ASCII Text
15.09.2024 21:45:41.690	68245946	5009	0x1FE	CH_A	FD	8	0x2D 0x00 0x00 0x00 0x00 0x00 0x00 0x00	-
15.09.2024 21:45:41.695	68250952	5006	0x1FE	CH_A	FD	8	0x32 0x00 0x00 0x00 0x00 0x00 0x00 0x00	2
15.09.2024 21:45:41.700	68255960	5008	0x1FE	CH_A	FD	8	0x37 0x00 0x00 0x00 0x00 0x00 0x00 0x00	7
15.09.2024 21:45:41.705	68260973	5013	0x1FE	CH_A	FD	8	0x3C 0x00 0x00 0x00 0x00 0x00 0x00 0x00	<
15.09.2024 21:45:41.710	68265982	5009	0x1FE	CH_A	FD	8	0x41 0x00 0x00 0x00 0x00 0x00 0x00 0x00	A
15.09.2024 21:45:41.715	68270994	5012	0x1FE	CH_A	FD	8	0x46 0x00 0x00 0x00 0x00 0x00 0x00 0x00	F
15.09.2024 21:45:41.716	68271113	119	0x123	CH_B	FD	8	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x3E	>
15.09.2024 21:45:41.716	68271269	156	0x010	CH_A	FD	8	0x02 0x00 0xDF 0x00 0x4B 0x00 0x39 0x00	B K 9
15.09.2024 21:45:41.716	68271395	126	0x1AB	CH_B	FD	8	0x00 0xBB 0x00 0x22 0x00 0x06 0x00 0xFB	» " ð ú
15.09.2024 21:45:41.716	68271539	144	0x020	CH_A	FD	8	0x00 0x82 0x46 0x00 0x0A 0x00 0x00 0x00	IF [LF]

1. As described in earlier sections, the play / pause / record / stop buttons have a direct impact on the data logger and the summary of the unique ID's and total collected data are still displayed
2. The data will scroll down vertically with new data appearing in the top row and pushing older data down and off the screen.
3. All recorded data may be exported either in the export format of the CANAnalyser SW (to be able to be loaded again) or as an export for external data analysis in either Excel or CSV formats.

3.3. Send CAN Messages Feature Tab

This feature tab is used to allow the user to create and send single or multiple CAN messages onto the bus. By default, data will be sent in the Periodic mode. More details will be listed below.

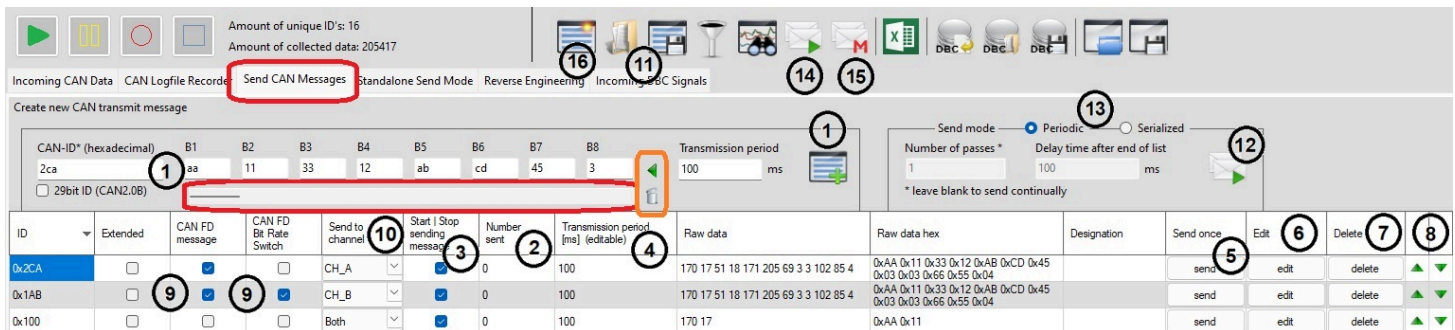

ID	Extended	CAN FD message	CAN FD Bit Rate Switch	Send to channel	Start/Stop sending message	Number sent	Transmission period [ms] (editable)	Raw data	Raw data hex	Designation	Send once	Edit	Delete
0x2CA	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	CH_A	<input checked="" type="checkbox"/>	0	100	170 17 51 18 171 205 69 3 3 102 85 4	0xAA 0x11 0x33 0x12 0xAB 0xCD 0x45 0x03 0x03 0x66 0x55 0x04	send	edit	delete	
0x1AB	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	CH_B	<input checked="" type="checkbox"/>	0	100	170 17 51 18 171 205 69 3 3 102 85 4	0xAA 0x11 0x33 0x12 0xAB 0xCD 0x45 0x03 0x03 0x66 0x55 0x04	send	edit	delete	
0x100	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Both	<input checked="" type="checkbox"/>	0	100	170 17	0xAA 0x11		send	edit	delete

1. Enter the ID and the byte data that is desired to be added to the send list. Only 8 bytes are displayed at a time. For a CAN FD message, use the scroll (red highlight above) to move through all 64 bytes. To jump back to B1, press the green arrow (orange highlight above). To delete all byte entries, press the trash can icon (orange highlight above). Once the message is fully entered, press the button with the green plus sign to add it to the end of the list below



CAN 2.0 supports sending any number of bytes from 1 to 8, however, moving beyond the first 8 bytes, CAN FD requires these sets of bytes to be fully populated. 12 bytes, 16 bytes, 20 bytes, 24 bytes, 32 bytes, 48 bytes, 64 bytes. Failure to fill in all bytes up to the next break-point will end up in a truncation of the additional bytes beyond the last valid byte barrier.



Do not add send messages with the same ID having CAN FD bit rate switch and without FD only (no bit rate switch) This will cause bus errors


2. When viewing this feature tab while messages are being sent, this column shows a count of how many times each message was sent.
3. When viewing this feature tab while messages are being sent, the checkboxes may be checked or unchecked dynamically to turn on and off sending of individual messages on the list if desired.
4. The transmission / delay period may be changed dynamically by double-clicking in the cells on this column if desired as a fast way to edit the transmission speed.
5. At any time, the user may press the **Send** button to manually send any message once (regardless of whether the messages are automatically sending or not).
6. To edit an existing message entry in the table, select **Edit** to open a window of parameters to change and then **Save changes**.
7. Select **Delete** to delete a message entry from the table.
8. The up and down arrows may be used to move a message up or down the list order. Note that this is not useful in Periodic mode but it is useful on the Serialized mode.
9. The data type of the message ID may be set by setting these checkboxes
 - o Extended
 - o CAN FD message
 - o CAN FD bit rate switch (selecting this checkbox forces the CAN FD message checkbox to be selected)
 - o Not selecting any of these checkboxes means that the message will be send as CAN 2.0
10. The drop-down box allows the message to be selected to send to either Channel A, Channel B or both channels
11. The load and save icons are used to load a previously saved list of messages to send or to save the current list. Note that a saved file can be also opened as a macro (see next sub-section)




Saved files from the Send Messages tab (.CASF) and the Standalone tab (.CSSF) and **PEAK**™ (.XMT) may be opened

12. Pressing this button toggles between sending / stopping the list of messages to be sent to the bus.
13. Select the box to move between Periodic or Serialized messages to be sent. When Periodic is selected, the 2 boxes under it are grayed out and not required, however, when Serialized is selected, the user may specify a set number of passes that the list should be sent and if a delay time is desired at the end of the list before starting the next pass.
14. The global Start and Stop sending button works in all tabs. Note that the green arrow in the icon means that there are messages that can be sent and pressing it turns the arrow red to show that it is sending. If that arrow is red, pressing it will stop sending and then turn the arrow green. If the arrow is grey, that means there are no messages ready to be sent yet and messages will need to be added first
15. This will enter the Macro sending options mode (see next sub-section)
16. This button will erase the entire send list

3.3.1. Separate Selection of Send Notation

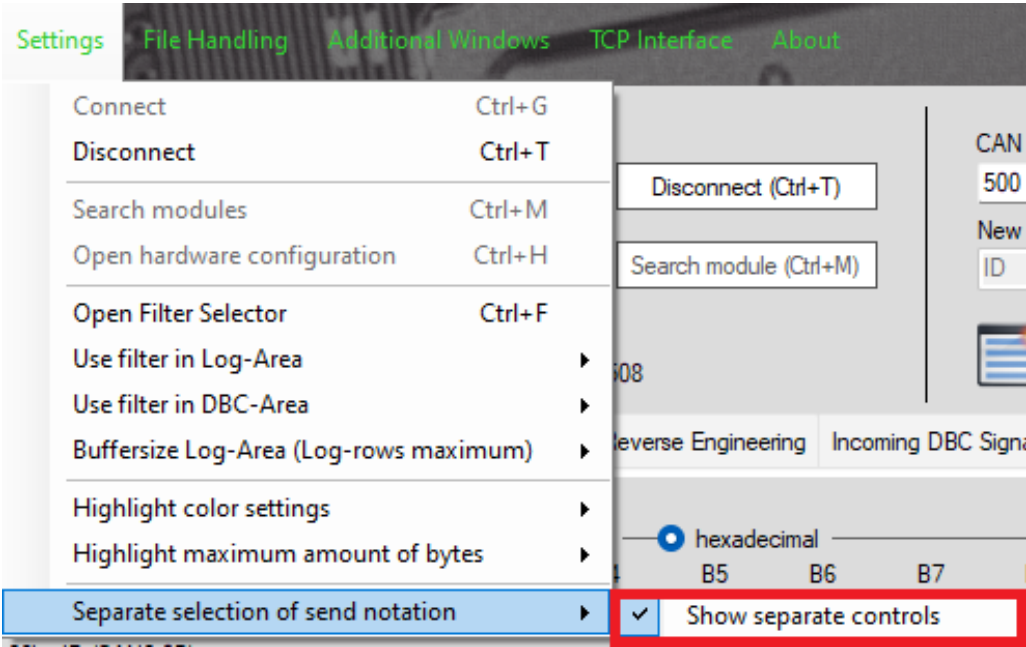

This menu item only impacts the Send Messages area. This allows the user to specify if they want to use separate send notations from the mean CAN ID display format. Note that using the separate send notification allows the user to specify either Decimal or Hexadecimal in the Send message formatting.

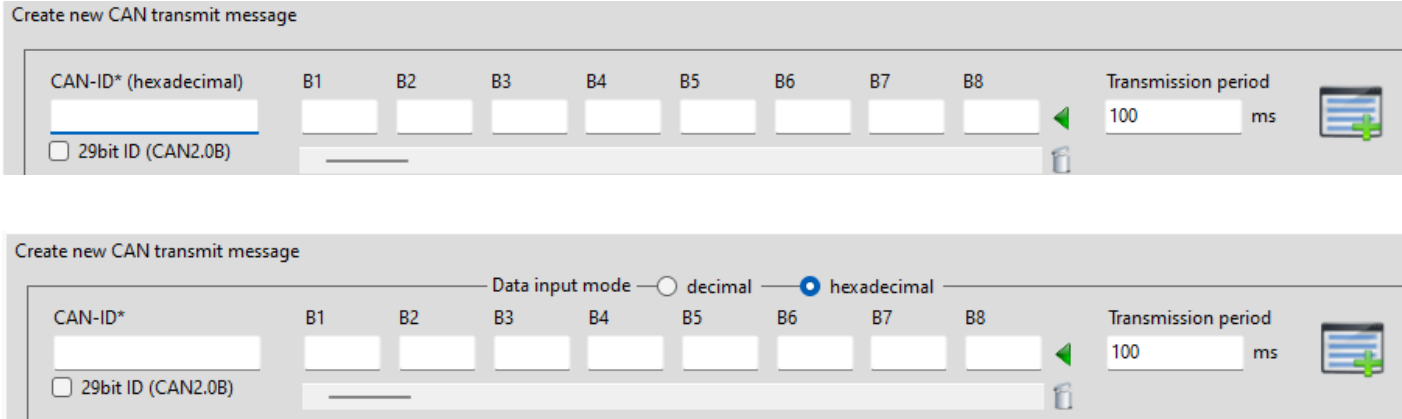


3.3.2. Send Macro Messages

This sub-section will describe how to make use of the macros feature. There are 6 macro slots that may be used.



There can only be one visible send list so the active list of messages is still tied to the regular send button.

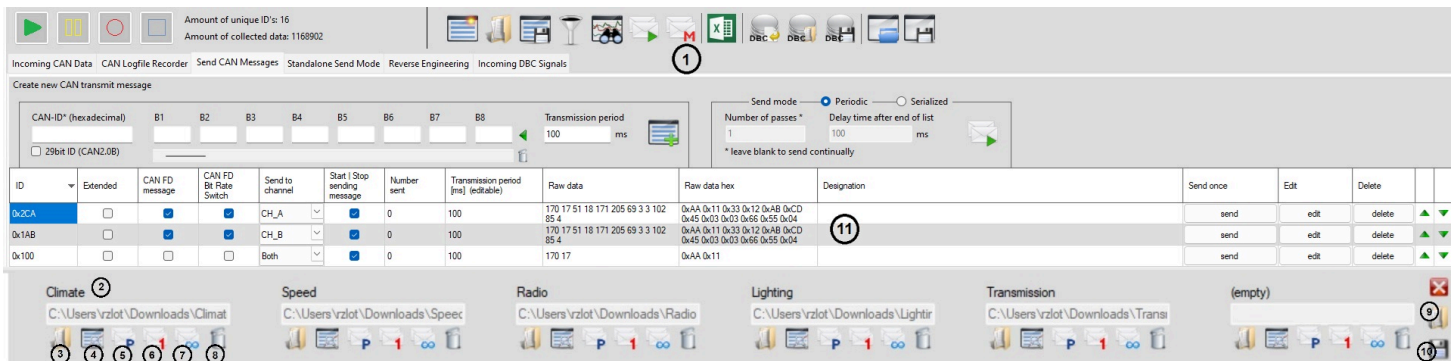

1. The red M button toggles the macros at the bottom of the active send list. **Note that the Macro button is on the main buttons at the top of the screen.** If the macros are toggled off, macros cannot be used
2. This is the name of the file of the loaded macro in each slot. If a file is not loaded in one of the slots, it will say (empty)
3. The open button allows a previously saved list of sent messages to be loaded as a macro
4. If it is desired to view / edit the messages from the macro, pressing this button will replace the active send list data with the data from the macro. **If the current visible send list has different data than the macro, a context box will ask if you want to save the current active send list before overwriting it**
5. Toggles the send mode between periodic and serialized
6. Sends the macro once
7. Sends the macro infinitely until stopped
8. Removes the macro from the list
9. Opens a master list of macros that prefills all 6 slots
10. Saves the current list of 6 macros into a single reloadable file to repopulate the macros
11. This is the active send list.

3.4. Reverse Engineering Feature Tab

This feature allows the user to locate the specific target bytes or bits that are changing in a specific Arbitration ID based on a set of criteria. This is useful if the user knows the ID of an action on the bus, however the user needs to find out the specific data that is changing within that ID. The data may be search by bytes or bits as a criteria.

Incoming CAN Data | CAN Logfile Recorder | Send CAN Messages | Reverse Engineering | Incoming DBC Signals | DBC Data


Create new search grid

CAN-ID* (hexadecimal) 1AB ☐ 29bit ID (CAN2.0B) Min. search deviation* 10 Search mode* byte selective Bitwise search only Start position (bit) 0 Signal length 1 Search direction* rising & falling

ID	Extended	Min. deviation	Start position (bit)	Signal length	Search mode	Search direction	Number of search hits found	Active	Edit	Clear	Show hit list
0x1AB	<input type="checkbox"/>	10	0	1	byte selective	rising & falling	385	enabled	edit	delete	hit list

1. Specify the target Arbitration ID
2. Specify the deviation limit of data change (in decimal value) of what is being searched for in the data changes
3. This is the drop-down to select if the search should be done with the byte selective or bit selective method
4. This is only accessible when the user selects a bit selective search mode (see next sub-section for details)
5. To narrow down the deviation, the user may select a matching hit if the data deviation is either rising or rising and falling from the nominal value specified in the Min. search deviation
6. Pressing this button adds the search criteria to the list and the search begins immediately based on the current traffic on the bus
7. As the search criteria matches a hit on the bus, this number will increase to let the user know there is a match to the search criteria
8. There are 3 buttons here to interact with rows in the existing search items. The first button allows the search row to be enabled or disabled. The second button lets you edit the search criteria. The third button will delete that search criteria row
9. To view the matching hits, pressing this button opens the hit list window shown here:


SLSS CAngeiner - list of search results

 5

ID (* = extended)	Location (byte) [bit - length]	Value at start (decimal)	Value at start (binary)	Value at end (decimal)	Value at end (binary)	Value change (decimal)
427	(B2)	117	000000001110101	201	000000011001001	84
427	(B4)	135	000000010000111	164	000000010100100	29
427	(B4)	164	000000010100100	216	000000011011000	52
427	(B6)	33	000000000100001	220	000000011011100	187
427	(B8)	71	000000001000111	130	000000010000010	59
427	(B2)	36	000000000100100	47	000000000101111	11
427	(B4)	41	000000000101001	216	000000011011000	175
427	(B6)	25	000000000011001	220	000000011011100	195
427	(B8)	31	000000000011111	130	000000010000010	99
427	(B2)	36	000000000100100	161	000000010100001	125
427	(B8)	31	000000000011111	45	000000000101101	14

1. This column shows which byte contains the target location of the matching hit in the specified arbitration ID (showing in Decimal)
2. These columns show the decimal and binary value of the start of the change
3. These columns show the decimal and binary value of the end of the change
4. This column shows the delta of the value change to match the hit criteria
5. The table may be saved and also a previously saved table may be loaded for reviewing again.


3.4.1. Bit Selective Method

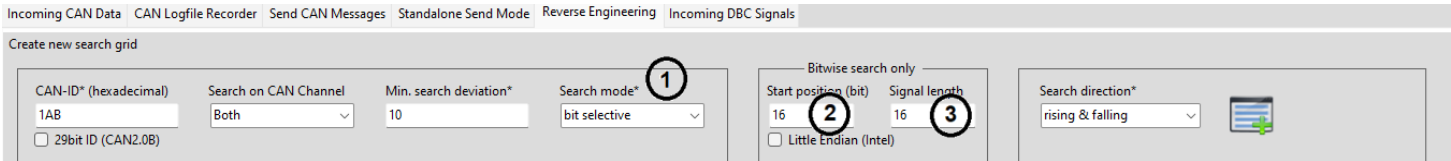

1. With the search mode changed to a bit selective search, the options in the box to the right of this drop-down become available
2. Choose the starting bit position for the search criteria. Note that bits go from 0 to 63 on the bus data for CAN 2.0 (representing 8 bytes) or from 0 to 511 for CAN FD (representing 64 bytes)
3. Choose the number of bits in length. For example, if the starting bit position is 16 and the length is 16 bits then the search will be from bit position 16 to end at 32.


3.4.2. Reverse Engineering CANgineer Search Parameters

Load and save search parameters from Reverse Engineering Tab

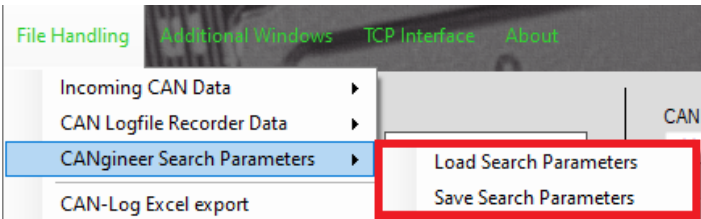

3.4.3. Reverse Engineering CANgineer Result Window

View the data results from the Reverse Engineering feature.

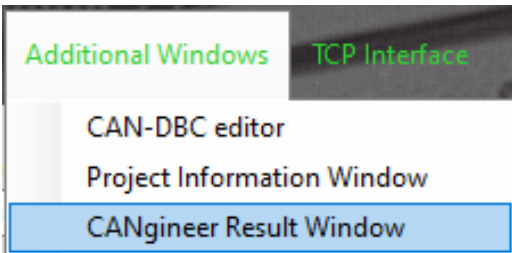

SLSS CANgineer - list of search results

ID (* = extended)	Location (byte) [bit - length]	Value at start (decimal)	Value at start (binary)	Value at end (decimal)	Value at end (binary)	Value change (decimal)

There is the ability to Load and save the data from the Result Window.

3.5. Incoming DBC Signals Feature Tab

This feature tab is used to see the human readable information to match the CAN ID to the specific messages and signal names. This tab also shows other non-human readable contextual data about the construct of the signals. DBC support is provided for CAN 2.0 and CAN FD DBC files.

Amount of unique ID's: 12
Amount of collected data: 4430

Incoming CAN Data | CAN Logfile Recorder | Send CAN Messages | Standalone Send Mode | Reverse Engineering | **Incoming DBC Signals**

☒ Show message settings ☒ Show mapping values ☒ Show message names

show all | hide empty

ID (* = extended)	Signal name	Message name	Frame (bytes)	start bit	Signal length	Little Endian (Intel)	Sign	Scaling	Offset	Unit	Display value	
0x77	BattTrac_U2_Actl	Battery_Traction_2	8	21	12	<input type="checkbox"/>	without	0.5	0	volt	2,255.000	
0x77	BattTrac_I2_Actl	Battery_Traction_2	8	7	18	<input type="checkbox"/>	without	0.05	-6553.52	ampere	3.000	
0x77	AwdLck_Tq_RqMn	SteeringPinion_Data2_HS1	8	27	12	<input type="checkbox"/>	without	1	0	Nm	0.000	
0x77	AwdLck_Tq_RqMx	SteeringPinion_Data2_HS1	8	23	12	<input type="checkbox"/>	without	1	0	Nm	4,095.000	
0x77	AwdLckRgen_Tq_RqMn	SteeringPinion_Data2_HS1	8	7	12	<input type="checkbox"/>	without	1	-4095	Nm	-4,095.000	
0x77	BrkTernMdeChng_D_Rdy	BrakeSnData_5_HS1	8	54	3	<input type="checkbox"/>	without	1	0	SED	Mode_Change_Ava	
0x77	BrkTernMde_D_Actl	BrakeSnData_5_HS1	8	38	3	<input type="checkbox"/>	without	1	0	SED	Special_Operating_	

1. Load / Save CAN DBC buttons. Use the Load button to load the DBC file that populates the respective human readable data in this tab as well as the Incoming CAN Data tab / CAN Logfile Recorder tab and the data export.
2. The key human readable signal name, message name and display values are shown here.
3. By default, the DBC will load and populate the view for ALL CAN ID's that match to the DBC file. If it is desired to monitor live CAN bus traffic data in real time to see only the actual data messages on the bus then pressing the **hide empty** button will hide all rows that do not match live CAN data on the bus to make it easier to view. Pressing the **show all** button will revert back to show the entire list again.
4. This button opens a window to create new DBC signals or edit ones that already exist if a DBC file was loaded.
5. The "i" button will be lit up blue if there is detailed additional information about that particular signal. Click on the blue "i" button for additional information.

Create new DBC signal

Define a new DBC signal

CAN ID* (decimal)

☐ 29bit ID (CAN2.0B)

Signal name* (max. 32 characters)

ID designation* (max. 32 characters)

Frame (bytes)

Start bit*

Number of bits*

Signal type (LSB -> MSB)

Intel

Sign*

without

Scaling*

0

Offset*

0

Minimum value

0

Maximum value

0

Unit

Create signal

1

ID (decimal)	Signal name	Start bit	Number of bits	Scaling offset	Unit	Edit	Delete
674	Speed	0	16	0.01 0	Kph	edit	delete
674	Revs	16	16	.25 0	RPM	edit	delete
674	BAT_VOLTS	32	8	0.06 0	Volts	edit	delete
674	TRANS	63	2	1 0	POS	edit	delete
1099*	Population	64	64	0.001 1	People	edit	delete
1099*	Astronomical Distance	0	64	0.000000000001 0	Parsecs	edit	delete
1098	signal3	128	64	0.0000000001 0	Dimesion1	edit	delete
1098	signal2	64	64	0.00000001 0	Dimesion2	edit	delete
1098	signal1	0	64	0.000000001 0	Dimesion3	edit	delete
1122	Test_blank_signal	12	10	0 0	N/A	edit	delete

1. In this top box, all data to create a new signal may be input and then press the **Create signal** button to add it as an entry to the list (appending or a new list).
2. Pressing the **Edit** button will allow an existing signal to be edited.
3. Pressing the **delete** button will allow an existing signal to be deleted.

3.6. Enhancing Logdata with Human Readable Signal Data

Choose CAN hardware
COM47 (CAN-Device-10018D23)
☒ Auto search and connect at start-up

Choose CAN Channel
Both Channels

CAN speed (kbit/s)
500 | 4000
500 | 4000

CAN ID display format
Hexadecimal

CAN Data display format
Hexadecimal

Project Name

Creation Date

Information Text

Amount of unique ID's: 16
Amount of collected data: 1249898

Incoming CAN Data

CAN Logfile Recorder

Send CAN Messages

Standalone Send Mode

Reverse Engineering

Incoming DBC Signals

Time	Δt Start [μs]	Δt Message [μs]	ID	Channel	Data type	Data length	Data	ASCII Text	Designation
16.09.2024 15:50:00.430	64832683	5007	0x1FE	CH_A	FD	8	0xCD 0x00 0x00 0x00 0x00 0x00 0x00 0x00	f	
16.09.2024 15:50:00.435	64837693	5010	0x1FE	CH_A	FD	8	0xD2 0x00 0x00 0x00 0x00 0x00 0x00 0x00	Ó	
16.09.2024 15:50:00.440	64842703	5010	0x1FE	CH_A	FD	8	0xD7 0x00 0x00 0x00 0x00 0x00 0x00 0x00	x	
16.09.2024 15:50:00.445	64847709	5006	0x1FE	CH_A	FD	8	0xDC 0x00 0x00 0x00 0x00 0x00 0x00 0x00	Ü	
16.09.2024 15:50:00.450	64852716	5007	0x1FE	CH_A	FD	8	0xE1 0x00 0x00 0x00 0x00 0x00 0x00 0x00	á	
16.09.2024 15:50:00.455	64857722	5006	0x1FE	CH_A	FD	8	0xE6 0x00 0x00 0x00 0x00 0x00 0x00 0x00	æ	
16.09.2024 15:50:00.460	64862732	5010	0x1FE	CH_A	FD	8			
16.09.2024 15:50:00.465	64867739	5007	0x1FE	CH_A	FD	8			
16.09.2024 15:50:00.470	64872745	5006	0x1FE	CH_A	FD	8			
16.09.2024 15:50:00.475	64877755	5010	0x1FE	CH_A	FD	8			
16.09.2024 15:50:00.480	64882767	5012	0x1FE	CH_A	FD	8			
16.09.2024 15:50:00.480	64882907	140	0x2A2	CH_B	FD	8	0xE9 0x49 0x34 0x5E 0x6D 0x10 0x5C 0x02	eI 10	Vehicle_Messages
16.09.2024 15:50:00.481	64883047	140	0x010	CH_A	FD	8	0xD9 0x00 0x2B 0x00 0x31 0x00 0x14 0x00	Ü + 00	
16.09.2024 15:50:00.481	64883324	277	0x44B	CH_B	EXT FD	16	0xEE 0x49 0x1D 0xE9 0x5E 0x4E 0x94 0xD8 0xF4 0x49 0x86 0xE9 0x5E 0x6C 0x94 0x4A	i16"N0016"U	CANFD_Ext_DBC_Signals
16.09.2024 15:50:00.481	64883538	214	0x020	CH_A	FD	8	0x00 0xFA 0x82 0x00 0x82 0x00 0x00 0x00	ü 00	
16.09.2024 15:50:00.481	64883986	448	0x44A	CH_B	FD	24	0xF4 0x49 0xB1 0xE9 0x5E 0x60 0x94 0xB0 0xEF 0x49 0xC9 0xE9 0x5E 0x47 0x94 0x8F 0xEF 0x49 0xDA 0xE9 0x5E 0x69 0x94 0xEB	ð1æ"11E6"G1Ü6"6	CANFD_DBC_Signals

Enhance the log data?

Loaded DBC data was found. Do you wish to enhance the log export with DBC data?

Note: This process may take some time!

1. If a DBC file is loaded and the user presses the STOP button, a context box will ask if the user desires to enhance the log files. This will take some time to post-process and add all of the DBC human readable signal data to the logfile and will be available in the exports.
2. If the user chooses to enhance the log data, a pop-up window will inform the user of the short progress bar to enhance the logs and then the box will close when it is completed (see image below)
3. Upon the completion of the log enhancement process, any saving of the data or the export (CSV or Excel) will include an enhanced data logging file that includes the Designation as well as the list of all human readable signals for each Arbitration ID for each data change.

Enhancing the log export with DBC signals, please wait...

Example from an Excel export:


Overview CAN Logfile recorder view

SLSS CANAnalyser - Excel export creation time: Thursday, November 16, 2023 23:28:28.0575956

Time	Δt Start [μs]	Δt Message [μs]	ID	Channel	Raw Data	ASCII Text	Data B1	Data B2	Data B3	Data B4	Data B5	Data B6	Data B7	Data B8	Designation
16.11.2023 23:27:11.580	7999496	796	0x2A2	CH_B	39 154 95 105 234 9 162 172	Je c~	0x27	0x9A	0x5F	0x69	0xEA	0x9	0xA2	0xAC	Vehicle_Messages * KPH: 394.630 * RPM: 6.743.750 * BAT_VOLT: 14.040 * TRANS: Neutral
16.11.2023 23:27:11.880	8299398	802	0x2A2	CH_B	51 163 113 111 234 144 76 16	3Eqo#LI	0x33	0xA3	0x71	0x6F	0xEA	0x90	0x4C	0x10	Vehicle_Messages * KPH: 417.790 * RPM: 7.132.250 * BAT_VOLT: 14.040 * TRANS: Park

3.7. Standalone Send Mode Feature Tab

This feature tab is used to configure the hardware dongle to be able to be disconnected from the SLSS CANAnalyser software and be able to be powered via the USB connector or the DB-9 connector to autonomously send a programmed list of up to 40 messages. Once the dongle is reconnected to the SLSS CANAnalyser software again, it will operate as if it were not in Standalone mode and the user may reconfigure it in this feature tab again.

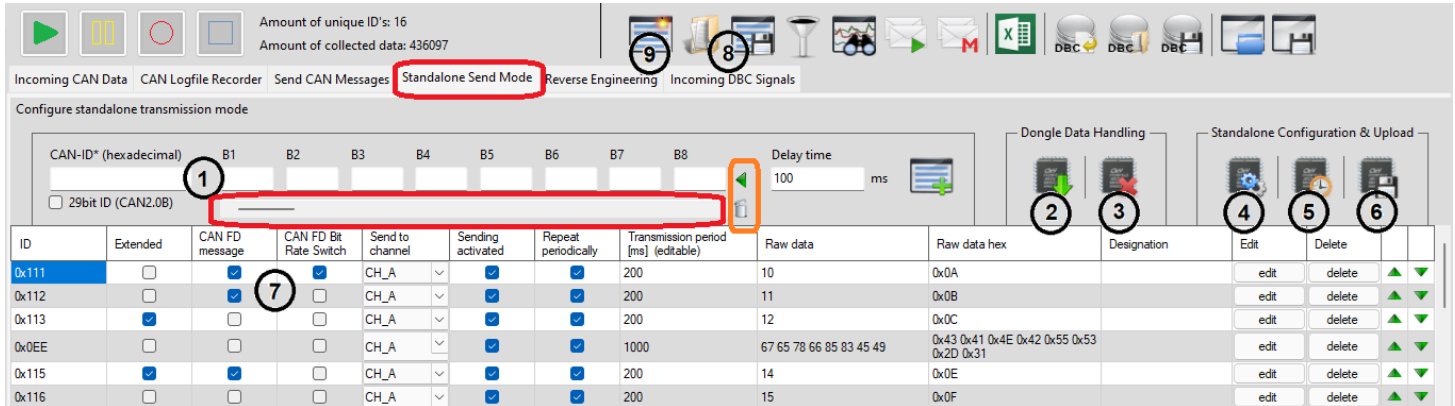

Much of this interface is in common with the Send CAN Messages tab so most of the duplicate items will not be focused on here.

1. Enter a message as desired. Specify the ID and the byte data. Only 8 bytes are displayed at a time. For a CAN FD message, use the scroll (red highlight above) to move through all 64 bytes. To jump back to B1, press the green arrow (orange highlight above). To delete all byte entries, press the trash can icon (orange highlight above).



CAN 2.0 supports sending any number of bytes from 1 to 8, however, moving beyond the first 8 bytes, CAN FD requires these sets of bytes to be fully populated. 12 bytes, 16 bytes, 20 bytes, 24 bytes, 32 bytes, 48 bytes, 64 bytes. Failure to fill in all bytes up to the next break-point will end in a truncation of the additional bytes beyond the last valid byte barrier.

2. Retrieves a stored list of messages and the hardware settings from the dongle (if the dongle currently has the messages and settings stored).
3. Erases stored message lists and standalone settings from the dongle and will disable the stand alone mode from the dongle when it is not connected to the SLSS CANAnalyser software. This may be reenabled by sending a new list.
4. This is to configure the dongle hardware for its setup configuration for either CAN 2.0 or CAN FD for once it is disconnected from the SLSS CANAnalyser software and functioning independently in standalone mode. Note that this configuration menu is also independent from the configuration menu at the top. Settings may be different.



See connection setting details in the next sub-section

5. This is to send the standalone message list to the dongle as a temporary list. As long as the dongle is still powered, this list will remain in the dongle, however if power is disconnected, this list is not committed to the dongle.
6. This is to send the standalone message list to the dongle as a committed list. Once this is completed, if power to the dongle is disconnected, this list is permanently committed to the dongle until overwritten or erased. Any time the hardware dongle is powered up after this, the Standalone mode will be the initial default mode for the dongle. A connection to the SLSS CANAnalyser software will still allow for normal software connected functionality.

7. For the lower section of the message list itself, this is in common with the Send CAN Messages tab except that there are 2 new columns. A message may now be set as a CAN FD message and if so, it may also be able to be configured to enable the bit rate switch functionality.
8. The load and save icons are used to load a previously saved list of messages to send or to save the current list.



Saved files from the Send Messages tab (.CASF) and the Standalone tab (.CSSF) and **PEAK**™ (.XMT) may be opened

9. This button will erase the entire send list

3.8. Standalone dongle hardware configuration settings

CAN Channel	CAN FD active	Arb. bitrate [kbit/s]	FD bitrate multiplier	Bus interaction mode	Send CAN messages	Configurable termination resistor	Start Delay Time [s]
CH_A	yes	500	x1	normal	enabled	enabled	0
CH_B	yes	500	x1	normal	enabled	enabled	0

☒ Activate manual CAN FD settings for channel A

Clock Frequency: 80 MHz
 Sample P. (Arb.): 80 %
 Bitrate (Arb.): 500 kbit/s
 Prescaler (Arb.): 1
 PSEG1 (Arb.): 127
 PSEG2 (Arb.): 32
 SJW (Arb.): 32
 TDC: 12

Sample P. (Data): 80 %
 Bitrate (Data): 4000 kbit/s
 Prescaler (Data): 1
 PSEG1 (Data): 15
 PSEG2 (Data): 4
 SJW (Data): 4

Get values
 Check settings

☒ Activate manual CAN FD settings for channel B

Clock Frequency: 80 MHz
 Sample P. (Arb.): 80 %
 Bitrate (Arb.): 500 kbit/s
 Prescaler (Arb.): 1
 PSEG1 (Arb.): 127
 PSEG2 (Arb.): 32
 SJW (Arb.): 32
 TDC: 12

Sample P. (Data): 80 %
 Bitrate (Data): 4000 kbit/s
 Prescaler (Data): 1
 PSEG1 (Data): 15
 PSEG2 (Data): 4
 SJW (Data): 4

Get values
 Check settings




These configurations are independent for the standalone mode from the main SLSS CANAnalyser behaviors from the hardware configuration settings earlier in this manual

All of the configuration options are in common with the primary software configuration options that are already explained in Section 2.3.2 with the exception of the Start Delay feature. This allows a time delay to be added from the time that the dongle is powered up in Standalone mode until it begins broadcasting the standalone messages programmed into it.

4. Other Menu Items

4.1. Accessing the SLSS CANData Viewer

This menu option feature is used to be able to load in a previously saved data session and view the data inside the software

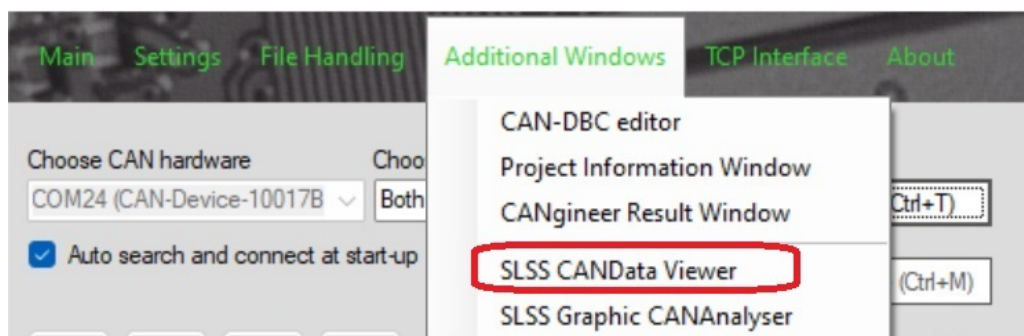

Alternatively, the 3 file extensions (.scdf, .scdv & .rcdf) may be double-clicked and opened directly from a Windows Explorer folder. Doing this will directly open an instance of the Data Viewer program.

File extensions


scdf - SLSS CAN Data file - Saved current data from the Incoming CAN Data tab (snapshot of the current messages - 1 per ID)

scdv - SLSS CANData Viewer file - Saved table content of the SLSS CANData Viewer (can be saved as a sub-set to remove filtered items)


rcdf - SLSS recorded CAN Data file - Saved current data from the CAN Logfile Recorder tab (full log export data)

4.2. SLSS CANData Viewer Main Program

All of SLSS CANAnalyser saved file formats are supported.

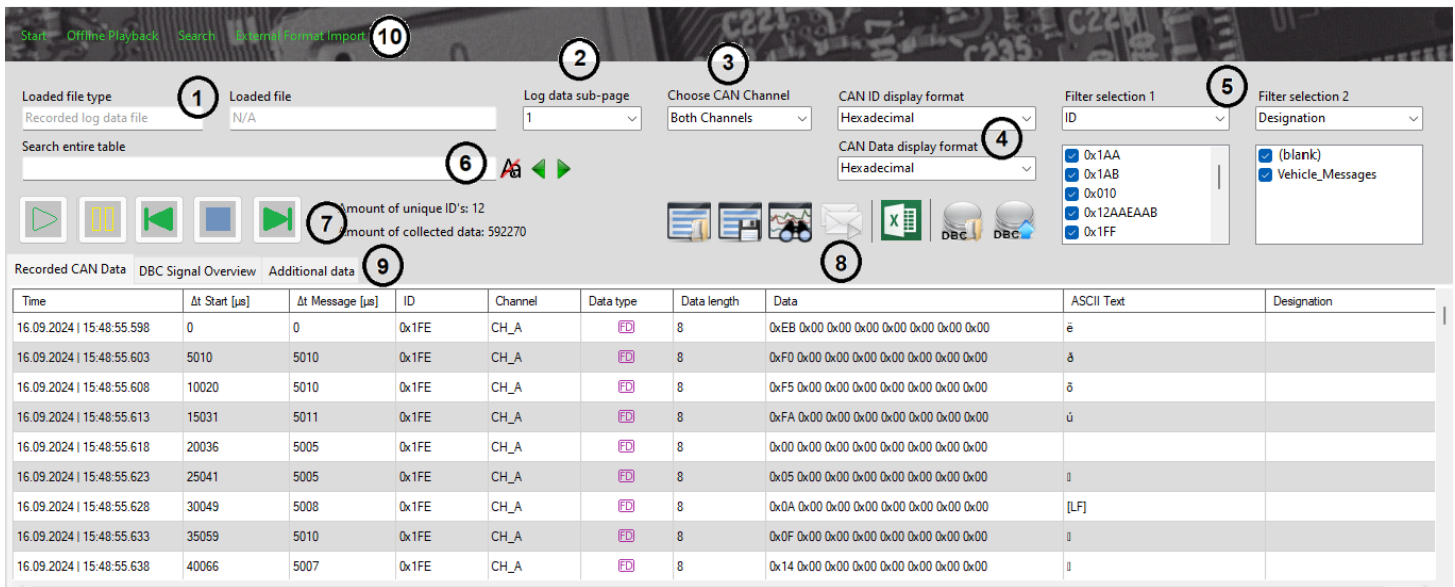


1. Information displayed based on the file loaded. It states the type of file and the file name that was loaded
2. In the case of loading a file that has more than 200,000 rows, to conserve PC memory resources, the data will be broken into sub-pages of up to 200,000 lines per sub-page. This drop-down allows the user to select a different sub-page of data to access
3. This allows the view of only CH_A or CH_B or both channels from the loaded data
4. These drop-downs are used to change the format of either the ID or Byte data (HEX, DEC, BINARY)
5. Filter 1 and Filter 2 may be set to provide 2 layers of filtering of ID or bytes or designation to find the data that is desired. To select or deselect all messages in a filter list, right click on the list and select "Select all" or "Deselect all"

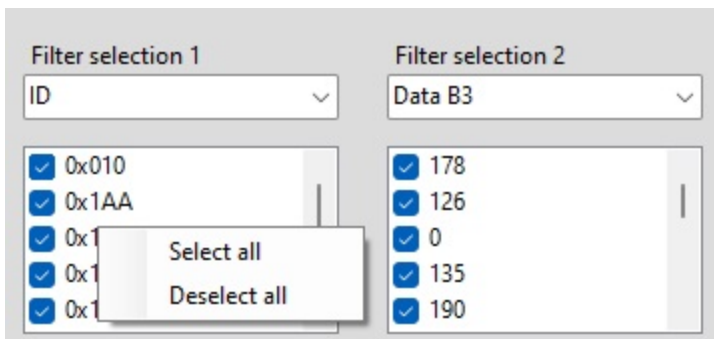

6. This is a data search field. Any text entered here will highlight a cell in blue color for matching criteria. Beside it is an icon to enable or disable case matching. The green arrows beside that will move to the next or previous matched cell
7. These are the data control buttons. From left to right is Play, Pause, Step backwards, Stop, Step forwards. Note, to play back the data, press the play button. The play button must be enabled for the graphical viewer to show the graph
8. These are the feature control buttons. From left to right is the Load data button (loads scdf, scdv, rcdf files), the save button to save a copy of your current filtered data, the graphical analyser button (operates identical to this button in the main software), the playback CAN button (future application to play back recorded data back onto the live bus), Export data button (choose from Excel or CSV), load DBC file button and then the last button will go through the loaded data rows and enhance it with the loaded DBC file data

9. There are 4 tabs in the main viewing window. The first 3 operate identically to the way these 3 tabs operate in the main SLSS CANAnalyser software. The Recorded CAN Data tab shows the logged data rows (that can be played back). The DBC Signal Overview tab shows you all the decoded human readable DBC signal data that can also be played back to see dynamic data as it changes. The DBC Data tab allows the direct viewing of the DBC file itself. The 4th tab "Additional data" is for imported data such as imported send message data that can be viewed and then converted / saved into the SLSS CANAnalyser format to load into the main software
10. The software currently supports 3 data import functions. **PEAK™** .TRC V2.0 and V2.1 format log files and **PEAK™** .XMT send message list files may be imported. Additionally CSV files that were previously exported from SLSS CANAnalyser format may also be imported

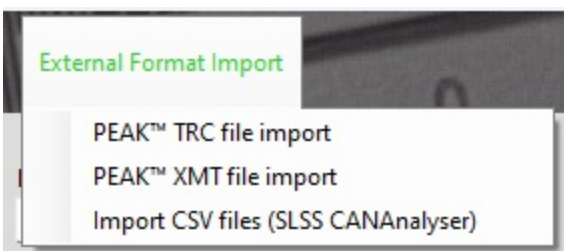

The drop-down menus to change selections will be greyed-out (unavailable) if the Data Viewer is in PLAY or PAUSE mode. Press STOP to make adjustments and then resume playing back.

4.2.1. Converting imported .XMT files into SLSS CANAnalyser .CASF or .CSSF files

Step 1 - Import the desired .XMT file

Step 2 - Press the save button

Main
Offline Playback
Search
External Format Import

Loaded file type
Imported PEAK™ XMT file

Loaded file
Test Import File.xmt

Log data sub-page
1

Choose CAN Channel
Both Channels

CAN ID display format
Decimal

Filter selection 1

Filter selection 2

Search data in the table

▶
⏸
◀
◻
▶

Amount of unique ID's: 0
Amount of collected data: 0

1


Icons for various functions: list, save, print, etc.

Recorded CAN Data
DBC Signal Overview
Additional data

ID	Extended	CAN FD message	CAN FD Bit Rate Switch	Send to channel	Sending activated	Repeat periodically	Transmission period [ms]	Raw data	Raw data hex	Designation
0x383	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	CH_A	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	50	34 26 3	0x22 0x1A 0x03	Session Management
0x7A3	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	CH_A	<input checked="" type="checkbox"/>	<input type="checkbox"/>	0	143 221 26 254	0x8F 0xDD 0x1A 0xFE	Test Mode
0x59E	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	CH_A	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	1000	0 0 0 0 0 0 0	0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x40 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x07 0x80 0x00	Keep Alive
0x4A8	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	CH_A	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	1000	64 0 7 128 0	0x00 0x00	Set Parameter


Step 3 (option 1) - To save it as a file to be able to be loaded into SLSS CANAnalyser main program Send CAN Messages tab, select the .CASF format option as the **Save as type** and then choose a file name

Step 3 (option 2) - To save it as a file to be able to be loaded into SLSS CANAnalyser main program Standalone Send Mode tab, select the .CSSF format option as the **Save as type** and then choose a file name

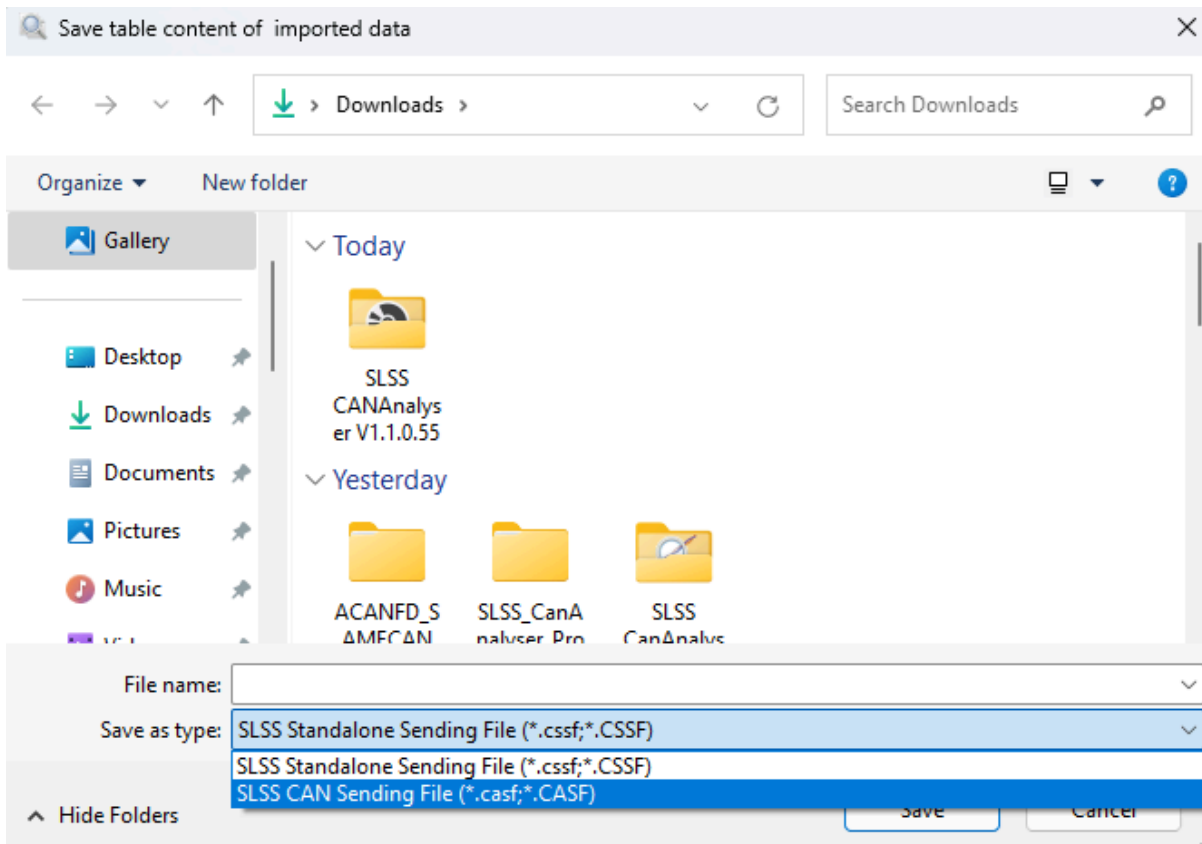

4.3. Playback Graphical Analyser from the Data Viewer

The selected ID will be displayed in the graphic viewer. Note that this operates identically to how the primary graphical analyser works from the main software. Refer to the other chapter for the details instructions.

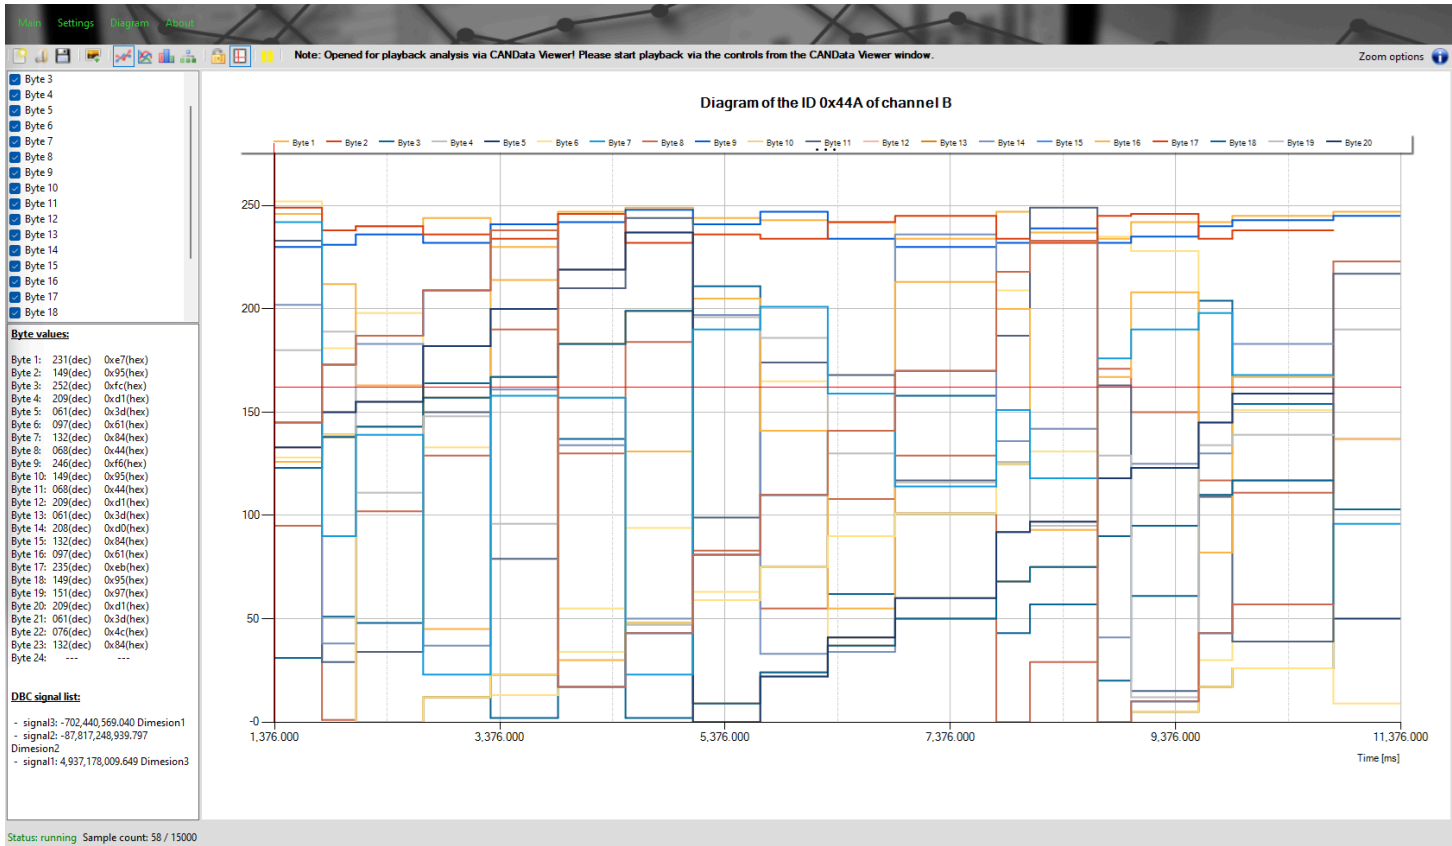

For this graphical analyser to play back the data, the PLAY button must be pressed in the SLSS CANData Viewer or else the graph will not display.


4.4. TCP/IP Communication Interface for Third-party applications

Using the TCP Interface, data can be passed to a third party application via TCP/IP network connection allowing CANAnalyser to be used as a server that can support multiple connected clients.

This makes it possible to create your own proprietary interface in scripting languages widely used in development, such as Python, Groovy or Lua, and to interface with the SLSS CANAnalyser software to control various functions and analyze the CAN data using a custom remote interface.

Here is a list of currently supported functions via TCP/IP interface to the SLSS CANAnalyser software:

- 1 - Send CAN message to bus channel A
- 2 - Send CAN message to bus channel B
- 3 - Send CAN message to both bus channels
- 4 - Mute the transmission of received CAN messages
- 5 - Start / stop logfile recording and save the logfile to a specific folder
- 6 - Start the hardware module search
- 7 - Connect to a specific CAN module by a known COM port
- 8 - Change CAN speed for bus A or bus B
- 9 - Toggle bus interaction mode for both transceivers between normal and listen-only
- 10 - Change the selected CAN channel
- 11 - Change arbitration ID notation between HEX, DEC and BINARY
- 12 - Change CAN data notation between HEX, DEC and BINARY
- 13 - Load a stored project file by the given file path
- 14 - Restart the software with or without active TCP/IP interface
- 15 - Close the software via TCP/IP command
- 16 - Get connection status information from the SLSS CANAnalyser
- 17 - Get run state information from the SLSS CANAnalyser

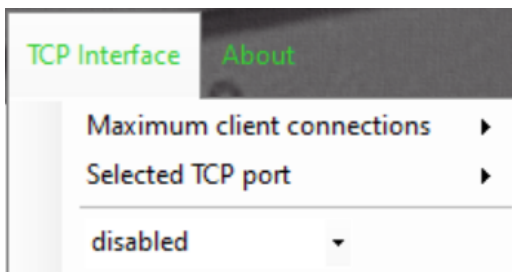

TCP/IP can support multiple connections so the user may specify the maximum number of connections are allowed to be accepted to the software. If the number is increased, the server opens the given number of network ports, starting from the port that gets defined. It is possible to open and stay connected simultaneously on different ports.

The user must then specify the TCP port to be forwarded on the router to open up for the IP address.

This interface may be enabled or disabled.




If the hardware dongle is disconnected during a TCP request, the CANAnalyser software will report a connection error

4.5. Hardware Dongle Firmware Updater


This menu option feature is used to update the firmware on your hardware dongle if required. To check to see if there is a required firmware update, follow this process.



Please press the "Disconnect" button before loading the SLSS HardwareSuite

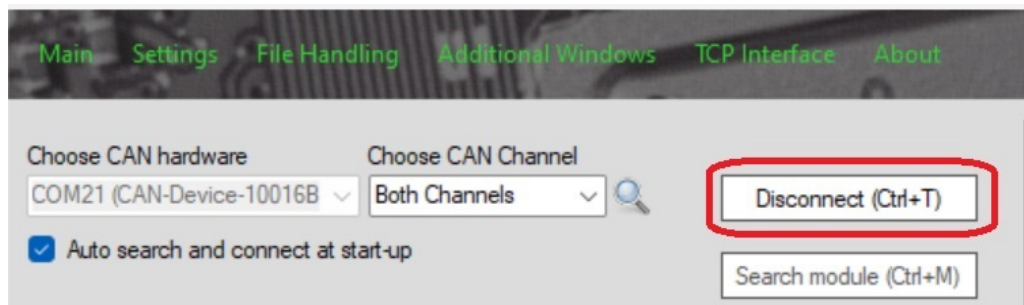

Select "SLSS HardwareSuite" from the "About" menu.

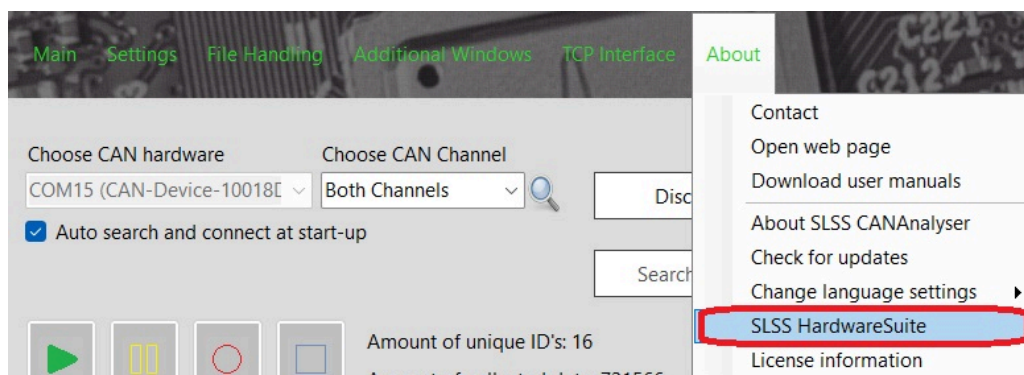

SLSS HardwareSuite V1.1.0.10

Main Update hardware list

SeRoSys Hardware Overview

- Desk CAN Pro (COM46)
 - Hardware serial no: 10018D230915
 - Installed firmware version: 1040
 - Available firmware version: 1040
 - Firmware status: No update required
- Desk CAN Starter (COM54)
 - Hardware serial no: 10015B230915
 - Installed firmware version: 1037
 - Available firmware version: 1037
 - Firmware status: No update required

Hardware Update Information

Update for Pocket CAN and Desk CAN Starter devices:

- Latest available software version: 1037
- Build date of latest version: 11/2023
- Included software version: 1037

Update for Desk CAN and Desk CAN Pro devices:

- Latest available software version: 1040
- Build date of latest version: 04/2024
- Included software version: 1040

SLSS CAN Education Program:
 The SLSS CAN Education Program gives teachers, pupils and students the opportunity to use the SLSS CANAnalyser with free hardware, such as Arduino, ESP8266 and ESP32. For more information visit us at SeRoSys-Tech.com.

Update Instructions

- 1) Plug in the device and wait until the device search is completed.
- 2) Make sure that no other program has established a connection to the device.
- 3) Select the device to be updated from the hardware list and click on it.
- 4) In the opened context menu, select the menu item "Update hardware".
- 5) The update process is carried out automatically.

Attention: The connection to the device must not be interrupted during the update process. An interruption can lead to the update being aborted and the device failing completely!

Emergency recovery: If unexpected errors occur during the update process and the device is no longer recognized after the update, there is the option of an emergency recovery. For security reasons, this can only be done by generating an activation token and requires contacting the SeRoSys support.

INFO: Searching for connected hardware, please wait...
 INFO: 1 connected device was found...
 INFO: Hardware changes detected - updating hardware list, please wait...
 INFO: 2 connected devices were found...

When the HardwareSuite loads, after a few seconds, the Hardware Overview will show you the dongle that is plugged in and it will show you the firmware status. If the firmware status is green then no update is required and the HardwareSuite may be exited. If the firmware status is yellow, that means there is an update required. Click on the yellow firmware status and follow the instructions.



Please read all the Hardware Update Information on the right side of the screen and follow the directions carefully. If there is a hardware technical issue or the dongle is disconnected during the update process and becomes unresponsive then contact SeRoSys technical support for assistance.

4.6. Troubleshooting

PC System resources

Check Task Manager

Too many open programs may have implications on available system resources such as memory and CPU availability and may cause poor performance of the tool:

- Open Task Manager and look for heavy users of system resources and shut down unneeded applications.
- Ensure a minimum of 8GB of RAM is installed on the target PC

Wiring and Hardware setup

Check wiring

If the dongle is connected properly to the SLSS CANAnalyser and there is no Incoming data, it may be caused by a wiring issue or a USB cable issue.

- Verify proper pinout for interfacing to the DB9 connector in the section titled "Connector Pinouts". **Make sure the polarity is correct for CAN H and CAN L.**
- Look for any loose, shorted or damaged wiring, especially in long buses.
- Verify that the ground is shared between all CAN nodes.
- Ensure that the USB cable is a USB 2.0 or USB 3.0 data capable cable.
- Ensure the bus is properly terminated with 120-ohm resistors at both ends of the bus.

If the dongle has no LEDs lit up at all then the dongle is either not receiving proper power or the dongle is defective.

- Ensure USB cable is tested as a good cable.
- If using the DB9 to power the dongle on **Storage CAN** or **Lab CAN**, verify >7VDC is applied to pin 9.

Noise issues

If the dongle is connected properly to the SLSS CANAnalyser and there are erroneous or unexpected or missing data showing, there may be a noise issue.

- If the bus is too long or not shielded properly, it may pick up noise.
- Implement twisted pair wiring for High and Low pins per channel to reduce noise.

Matching bus types

If the dongle is connected properly to the SLSS CANAnalyser and there is no Incoming data or only partial CAN 2.0 data, it may be caused by a mixture or mismatch of CAN 2.0 and CAN FD nodes.

- Ensure all nodes are using either CAN 2.0 or CAN FD-compliant nodes, as mixing CAN 2.0 and CAN FD nodes may cause unexpected results.
- IF CAN FD is required, ensure all nodes' controllers are CAN FD-compatible. CAN 2.0 controllers may misinterpret CAN FD messages, leading to errors.
- CAN 2.0 nodes are not compatible with CAN FD higher data rates

Dongle Hardware Configuration



A bus with CAN 2.0 only nodes is very forgiving on the hardware connection configuration settings, however a bus with CAN FD and especially with bit rate switch is extremely sensitive to precise configuration so please verify the settings carefully!

Check arbitration bitrate setup

- Ensure that all nodes on the bus are configured to use the same nominal arbitration bit rate.
- Typical rates: 500 kbit/s or 1 Mbit/s.

Check data bit rate setup (CAN FD only)

- Verify that the bit rate setting matches the target bus configuration
- Ensure that the data bit rate multiplier is properly configured (usually a multiple of the nominal bit rate).

Verify if manual settings are required or not (CAN FD only)

- When not using the manual settings, set the multiplier to provide the correct data bitrate. *Eg. Arbitration bitrate of 500 kbit/s with a multiplier of x8 equals 4000 kbit/s data bitrate*
- When not using the manual settings, note that the sample point percentage is a default of 75%. Use manual settings if another sample point is required.

Synchronize timing segments (CAN FD only when activating the manual settings)

- For both arbitration and data bitrates, adjust prescalers, PSEG1, PSEG2, SJW and TDC to optimize bus performance based on network size and wire length.
- Check sample point settings to avoid improper sampling of the signal.
- **Setting these improperly may cause unexpected problems and may even cause the bus to crash or go into bus off mode**

Specific other hardware configuration issues

Other causes of data not being seen in the Incoming CAN Data tab may be caused by one of these settings

- If bus interaction mode is set to **off**
- Incorrectly configuring the configurable termination resistor setting. A bus must be properly terminated with 120-ohm resistors at both ends of the bus so if interfacing to an existing terminated bus, set them to **disabled**, otherwise ensure they are **enabled**. CAN FD buses are more sensitive to this setting so be cognizant of this setting

If trying to send messages in the Send CAN Messages tab does not produce the actual messages being sent on to the bus, it may be disabled in the hardware configuration

- Ensure that the Send CAN messages are **enabled**.

Bit Rate Switch (BRS) Issues

If interfacing to a CAN FD bus that used bit rate switch messages, extra care is required to avoid bus crash issues and missed messages.

Mixed BRS modes on the same bus

- Ensure that all nodes are set to either use or not use BRS. Mixing nodes with BRS enabled and disabled can cause arbitration issues.
- Do not add send messages with the same ID having CAN FD bit rate switch and without bit rate switch

Diagnosing Specific Issues

Bus Off Errors

- This occurs when a node repeatedly fails to transmit or receive messages. If this occurs, try to reconnect the dongle to see if the dongle settings were the cause. If this does not work then the bus off error is caused by another node on the bus.

Only Channel A is available and certain features are not available

- If the drop-down menu is greyed out or you cannot select Channel B, the license file does not match the hardware dongle connected to it!
- Similarly, if certain features are not available, the license file does not match the hardware dongle connected to it!

4.7. Appendix / References

PEAK™ .TRC V2.0 and V2.1 formats supported from **PEAK**™ through their **PCAN**® software.

<https://register.dpma.de/DPMAreger/register/marke/register/397181558/DE>